


Fiamma

®

ELECTRIC HEATING AND INSTANTANEOUS SANITARY HOT WATER PRODUCTION WALL BOILER

series Elektra EASY 6-7-8-9-12-15-18 BP *Sky Touch*

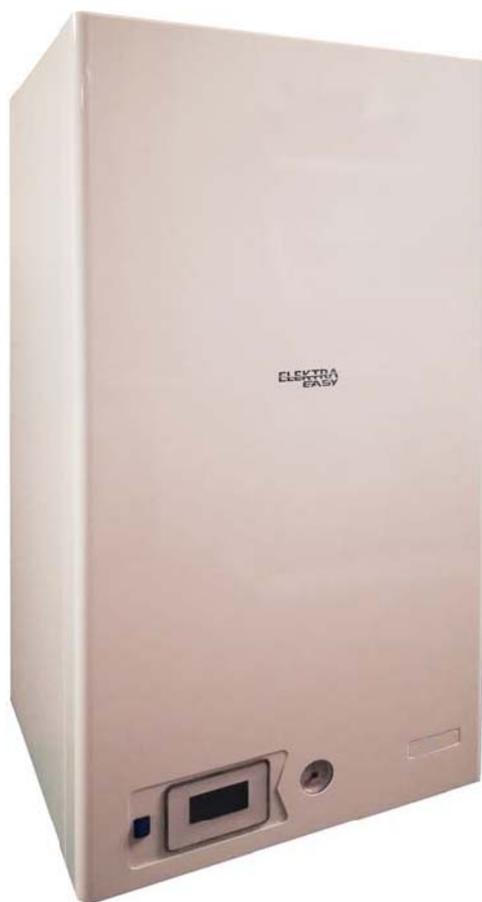

*Sky
Touch*

USE AND MAINTENANCE MANUAL



CE APPLIANCES IN COMPLIANCE WITH EUROPEAN DIRECTIVE 2006/95/EC. Built and compliant with the following standards: IEC 60335-2-21:2012, IEC 60335-1:2010, EN 60335-2-21:2003 + A1:2005 + A2:2008 - EN 60335-1:2012 - EN 62233:2008



ELECTRIC WALL BOILER

Series ELEKTRA EASY BP

Sky Touch

Presentation

Thank you for choosing a FIAMMA electric wall boiler, a product that features the latest heating technologies, and robust and safe materials that ensure maximum efficiency during use, the highest appliance quality and utmost safety for the user.

The **Elektra EASY...** series is built according to European Machine Directive 2006/42 - IEC 60335-1:2010 and EN 60335-2-21:2003 +A1:2005 + A2:2008 - EN 60335-1:2012 - EN 62233:2008.

The result is a product with several distinguishing features:

- Particularly quiet operation, with maximum insulation of the unit by means of innovative special materials, for minimum heat loss.
- High level of reliability due to the careful choice of materials and the rigorous tests carried out on each appliance after production.
- High yield, with maximum efficiency thanks to the modulation of the electric power to the heaters following the actual energy requirements of the system, or the sanitary water production needs. The D.E.S. system manages the appliance by means of temperature detection probes positioned in every sensitive point of the boiler, allowing the regulation of the "comfort" or "economy" operating modes to your requirements, in order to reduce consumption when the appliance is not used at maximum power or demand.
- The appliance is fully adjustable both as far as central heating system water temperature (with the possibility of choosing high and low temperature system for underfloor heating) and sanitary hot water temperature.
- The components have been coupled together so that they are all easily accessible from the front of the unit during routine and extraordinary maintenance activities.

We suggest that our recommendations are carefully followed, and that you contact an authorised FIAMMA service centre in your area to agree a scheduled maintenance contract, which will ensure that your appliance always operates at maximum efficiency and safety, and that it lasts a long time. In thanking you again for your choice, we would like to remind you that our technical offices and our technical-commercial network are always at your disposal to provide you with any information of a technical or general nature that you might require.

FIAMMA GIRO s.r.l.
Company group

FIAMMA GIRO s.r.l. rejects all responsibility for possible inaccuracies contained in this document, due to either printing or transcription errors. The company also reserves the right to make any changes deemed useful or necessary to its products, without prejudice to the essential characteristics of the products manufactured and sold.



WARNINGS:



THIS APPLIANCE MAY BE USED BY CHILDREN FROM 8 YEARS OF AGE AND OVER AND BY PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE, PROVIDED THAT THEY ARE SUPERVISED OR HAVE RECEIVED INSTRUCTIONS FOR THE SAFE USE OF THE APPLIANCE, SO THAT THEY UNDERSTAND THE RISKS INVOLVED. CHILDREN MUST NOT PLAY WITH THE APPLIANCE. CLEANING AND MAINTENANCE ACTIVITIES MUST NOT BE CARRIED OUT BY CHILDREN WITHOUT SUPERVISION.



THE CONNECTION TO THE ELECTRICITY NETWORK MUST BE THROUGH A DEVICE THAT ALLOWS ITS DISCONNECTION, WITH A CONTACT OPENING DISTANCE THAT ALLOWS COMPLETE DISCONNECTION UNDER THE CONDITIONS OF OVERVOLTAGE CATEGORY III, IN ACCORDANCE WITH THE INSTALLATION RULES.



IN ORDER TO PREVENT ANY RISKS, DAMAGED POWER SUPPLY CABLES MUST BE REPLACED BY THE MANUFACTURER OR ITS TECHNICAL SUPPORT SERVICE, OR BY SOMEONE WITH SIMILAR QUALIFICATIONS.



WATER MAY DRIP FROM THE OVERPRESSURE DRAIN PIPE OF THE APPLIANCE. FOR THIS REASON, SUCH PIPE MUST BE DIRECTED OUTSIDE AND LEFT OPEN.



THE PRESSURE RELIEF DEVICE MUST BE OPERATED REGULARLY TO REMOVE LIMESCALE DEPOSITS AND TO CHECK THAT IT IS NOT BLOCKED.



THE DRAIN PIPE CONNECTED TO THE OVERPRESSURE DEVICE MUST BE SET ON A CONTINUOUS DOWNWARD SLOPE AND IN A LOCATION PROTECTED FROM THE FORMATION OF ICE.



OVERALL DIMENSIONS

The **Elektra EASY BP** series comes in 7 power levels with the following dimensions:

Elektra Easy 6 kW BP

6 kW maximum electric power

Elektra Easy 7 kW BP

7 kW maximum electric power

Elektra Easy 8 kW BP

8 kW maximum electric power

Elektra Easy 9 kW BP

9 kW maximum electric power

Elektra Easy 12 kW BP



12 kW maximum electric power

Elektra Easy 15 kW BP

15 kW maximum electric power

Elektra Easy 18 kW BP

18 kW maximum electric power

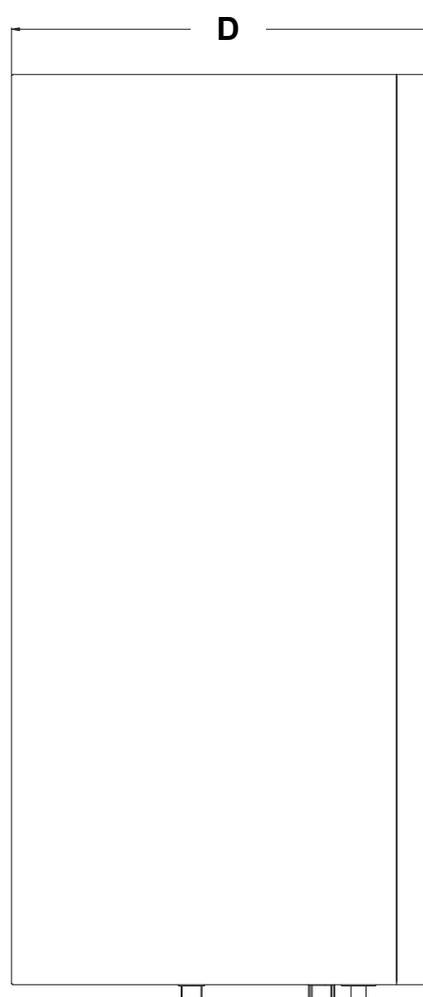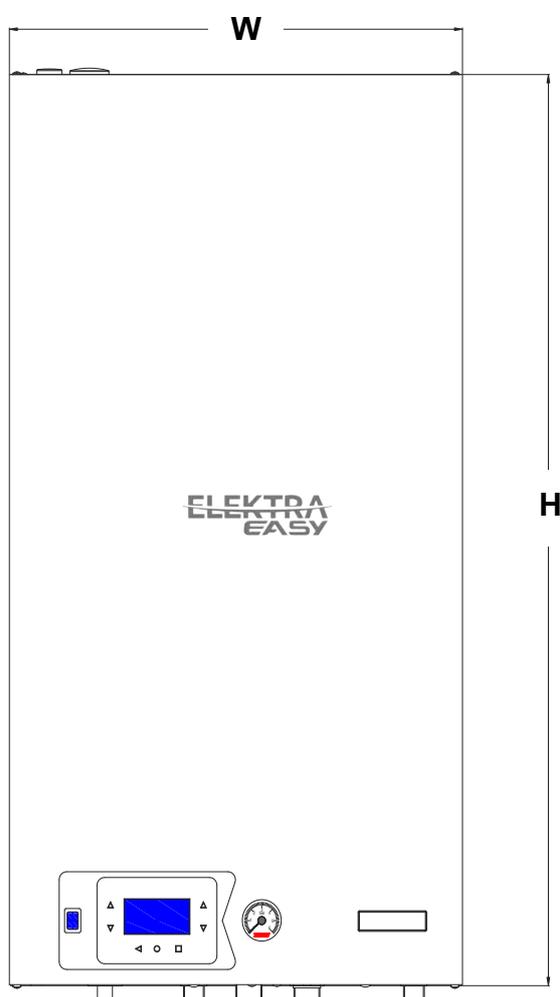

Appliance:

W (Width): 453 mm

H (Height): 875 mm

D (Depth): 453 mm

Weight: 58 kg

Packing dimensions:

Width: 500 mm

Height: 940 mm

Depth: 520 mm

Weight: 61 kg





HYDRAULIC CONNECTIONS - Connection arrangement diagram:

M	Central Heating Delivery:	3/4" M
R	Central Heating Return:	3/4" M
AF	Sanitary Cold Water:	1/2" M
AC	Sanitary Hot Water:	1/2" M
VSR	Central Heating Safety Valve (0.3 MPa - 3 bar):	1/2" F
VSS	Sanitary Water Safety Valve (0.65 MPa - 6,5 bar):	1/2" F

The appliance is designed to be continuously connected to the water mains without intermediate fittings.

View from below (under the boiler)

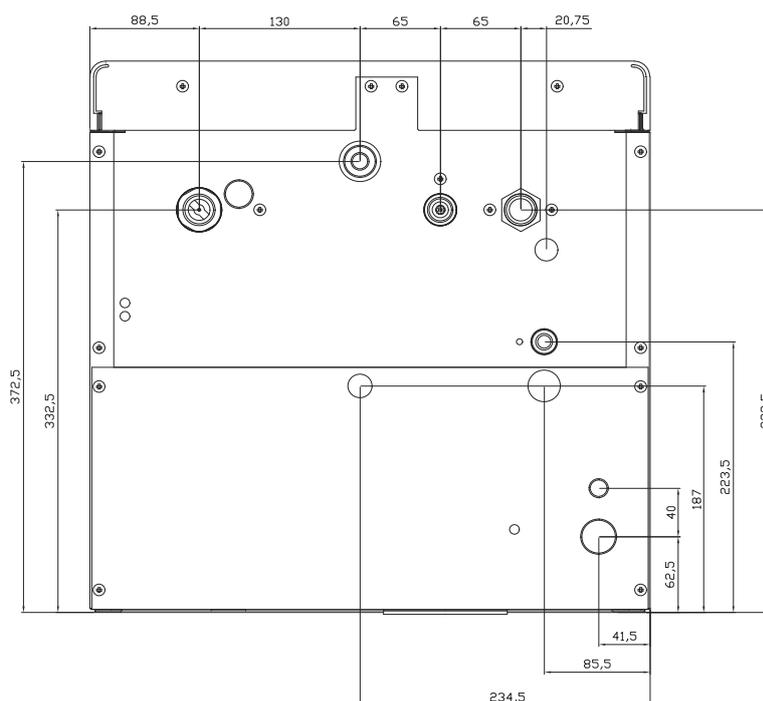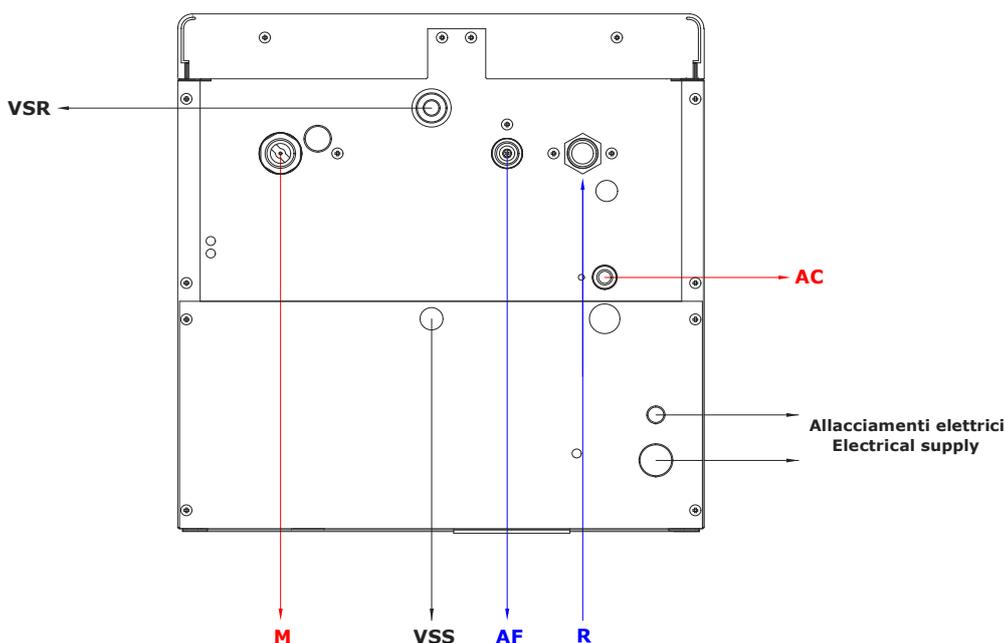



MAIN TECHNICAL FEATURES

Elektra Easy 6 kW BP 6 kW maximum electric power

Single-phase power supply: 230-240 V - 50 Hz

Weight: 58 kg.

37 litres storage tank in vitrified steel with inspection flange and magnesium anode.

Central heating system: 6 kW electric/thermal power from n°.2 heating elements (n°.2 of 3x1 kW).

Sanitary hot water: 2 kW (2.000 W) electric heating element for the sanitary hot water tank.

Maximum head available to the circulator approx 7 m.

Expansion vessel capacity 9 litres.

0.3 MPa (3 bar) central heating circuit safety valve.

0.65 MPa (6.5 bar) sanitary water circuit safety valve.

Maximum central heating operating pressure: 0.25 MPa (2.5 bar).

Maximum sanitary water operating pressure: 0.55 MPa (5.5 bar).

Minimum central heating circuit operating pressure: 0.06 MPa (0.6 bar).

Minimum sanitary water operating pressure in "*comfort*" mode: 0.025 MPa (0.25 bar).

Minimum sanitary water operating pressure in "*economy*" mode: 0.005 MPa (0.05 bar).

Central heating circuit-boiler body maximum thermal safety limit: 100°C.

Elektra Easy 7 kW BP 7 kW maximum electric power

Single-phase power supply: 230-240 V - 50 Hz

Weight: 58 kg.

37 litres storage tank in vitrified steel with inspection flange and magnesium anode.

Central heating system: 7 kW electric/thermal power from n°.2 heating elements (n°.1 of 3x1 kW and n°.1 of 3x2 kW).

Sanitary hot water: 2 kW (2.000 W) electric heating element for the sanitary hot water tank.

Maximum head available to the circulator approx 7 m.

Expansion vessel capacity 9 litres.

0.3 MPa (3 bar) central heating circuit safety valve.

0.65 MPa (6.5 bar) sanitary water circuit safety valve.

Maximum central heating operating pressure: 0.25 MPa (2.5 bar).

Maximum sanitary water operating pressure: 0.55 MPa (5.5 bar).

Minimum central heating circuit operating pressure: 0.06 MPa (0.6 bar).

Minimum sanitary water operating pressure in "*comfort*" mode: 0.025 MPa (0.25 bar).

Minimum sanitary water operating pressure in "*economy*" mode: 0.005 MPa (0.05 bar).

Central heating circuit-boiler body maximum thermal safety limit: 100°C.



Elektra Easy 8 kW BP 8 kW maximum electric power

Single-phase power supply: 230-240 V - 50 Hz

Weight: 58 kg.

37 litres storage tank in vitrified steel with inspection flange and magnesium anode.

Central heating system: 8 kW electric/thermal power from n°.2 heating elements (n°.1 of 3x1 kW and n°.1 of 3x2 kW).

Sanitary hot water: 2 kW (2.000 W) electric heating element for the sanitary hot water tank.

Maximum head available to the circulator approx 7 m.

Expansion vessel capacity 9 litres.

0.3 MPa (3 bar) central heating circuit safety valve.

0.65 MPa (6.5 bar) sanitary water circuit safety valve.

Maximum central heating operating pressure: 0.25 MPa (2.5 bar).

Maximum sanitary water operating pressure: 0.55 MPa (5.5 bar).

Minimum central heating circuit operating pressure: 0.06 MPa (0.6 bar).

Minimum sanitary water operating pressure in "*comfort*" mode: 0.025 MPa (0.25 bar).

Minimum sanitary water operating pressure in "*economy*" mode: 0.005 MPa (0.05 bar).

Central heating circuit-boiler body maximum thermal safety limit: 100°C.

Elektra Easy 9 kW BP 9 kW maximum electric power

Single-phase power supply: 230-240 V - 50 Hz

Weight: 58 kg.

37 litres storage tank in vitrified steel with inspection flange and magnesium anode.

Central heating system: 9 kW electric/thermal power from n°.2 heating elements (n°.1 of 3x1 kW and n°.1 of 3x2 kW).

Sanitary hot water: 2 kW (2.000 W) electric heating element for the sanitary hot water tank.

Maximum head available to the circulator approx 7 m.

Expansion vessel capacity 9 litres.

0.3 MPa (3 bar) central heating circuit safety valve.

0.65 MPa (6.5 bar) sanitary water circuit safety valve.

Maximum central heating operating pressure: 0.25 MPa (2.5 bar).

Maximum sanitary water operating pressure: 0.55 MPa (5.5 bar).

Minimum central heating circuit operating pressure: 0.06 MPa (0.6 bar).

Minimum sanitary water operating pressure in "*comfort*" mode: 0.025 MPa (0.25 bar).

Minimum sanitary water operating pressure in "*economy*" mode: 0.005 MPa (0.05 bar).

Central heating circuit-boiler body maximum thermal safety limit: 100°C.



Elektra Easy 12 kW BP 12 kW maximum electric power

Single-phase power supply: 230-240 V - 50 Hz

Weight: 58 kg.

37 litres storage tank in vitrified steel with inspection flange and magnesium anode.

Central heating system: 12 kW electric/thermal power from n°.2 heating elements (n°.2 of 3x2 kW).

Sanitary hot water: 2 kW (2.000 W) electric heating element for the sanitary hot water tank.

Maximum head available to the circulator approx 7 m.

Expansion vessel capacity 9 litres.

0.3 MPa (3 bar) central heating circuit safety valve.

0.65 MPa (6.5 bar) sanitary water circuit safety valve.

Maximum central heating operating pressure: 0.25 MPa (2.5 bar).

Maximum sanitary water operating pressure: 0.55 MPa (5.5 bar).

Minimum central heating circuit operating pressure: 0.06 MPa (0.6 bar).

Minimum sanitary water operating pressure in "*comfort*" mode: 0.025 MPa (0.25 bar).

Minimum sanitary water operating pressure in "*economy*" mode: 0.005 MPa (0.05 bar).

Central heating circuit-boiler body maximum thermal safety limit: 100°C.

Elektra Easy 15 kW BP 15 kW maximum electric power

Single-phase power supply: 230-240 V - 50 Hz

Weight: 59 kg.

37 litres storage tank in vitrified steel with inspection flange and magnesium anode.

Central heating system: 15 kW electric/thermal power from n°.2 heating elements (n°.1 of 3x2 kW and n°.1 of 3x3 kW).

Sanitary hot water: 2 kW (2.000 W) electric heating element for the sanitary hot water tank.

Maximum head available to the circulator approx 7 m.

Expansion vessel capacity 9 litres.

0.3 MPa (3 bar) central heating circuit safety valve.

0.65 MPa (6.5 bar) sanitary water circuit safety valve.

Maximum central heating operating pressure: 0.25 MPa (2.5 bar).

Maximum sanitary water operating pressure: 0.55 MPa (5.5 bar).

Minimum central heating circuit operating pressure: 0.06 MPa (0.6 bar).

Minimum sanitary water operating pressure in "*comfort*" mode: 0.025 MPa (0.25 bar).

Minimum sanitary water operating pressure in "*economy*" mode: 0.005 MPa (0.05 bar).

Central heating circuit-boiler body maximum thermal safety limit: 100°C.



Elektra Easy 18 kW BP 18 kW maximum electric power

Single-phase power supply: 230-240 V - 50 Hz

Weight: 59 kg.

37 litres storage tank in vitrified steel with inspection flange and magnesium anode.

Central heating system: 18 kW electric/thermal power from n°.2 heating elements (n°.2 of 3x3 kW).

Sanitary hot water: 3 kW (3.000 W) electric heating element for the sanitary hot water tank.

Maximum head available to the circulator approx 7 m.

Expansion vessel capacity 9 litres.

0.3 MPa (3 bar) central heating circuit safety valve.

0.65 MPa (6.5 bar) sanitary water circuit safety valve.

Maximum central heating operating pressure: 0.25 MPa (2.5 bar).

Maximum sanitary water operating pressure: 0.55 MPa (5.5 bar).

Minimum central heating circuit operating pressure: 0.06 MPa (0.6 bar).


Minimum sanitary water operating pressure in "comfort" mode: 0.025 MPa (0.25 bar).

Minimum sanitary water operating pressure in "economy" mode: 0.005 MPa (0.05 bar).

Central heating circuit-boiler body maximum thermal safety limit: 100°C.

POSITIONING OF THE BOILER

The appliance must always be installed on a vertical solid wall capable of supporting its weight, using the support bracket included in the packaging.

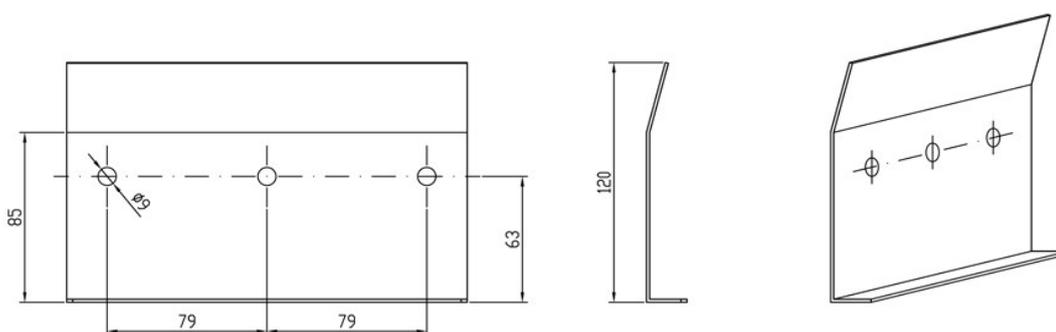


The bracket must be secured to the wall by means of three M8 screws with appropriate plugs for the type of wall (not supplied with the boiler).

The appliance must be attached to the top of the bracket, inserting the bent section of the same through the boiler frame at the back.




CONTROL PANEL

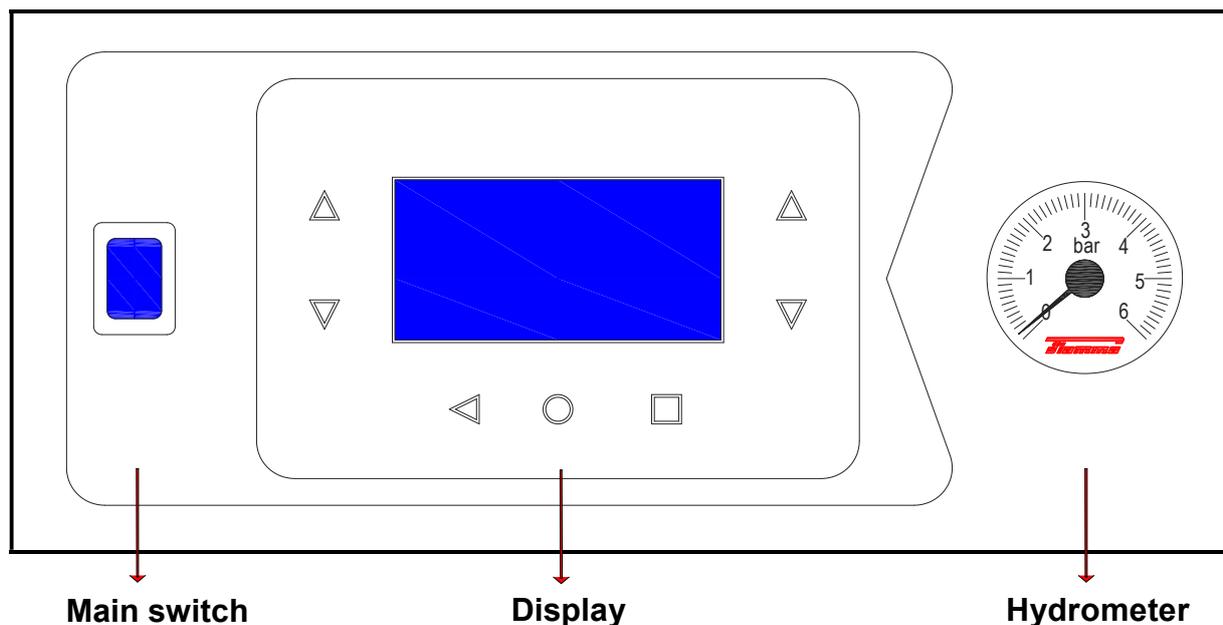

The control panel, consisting of the display screen, the function selection keys, the illuminated main switch and the hydrometer, can be found at the bottom left of the front of the appliance (see image above).

Keypad (control panel)

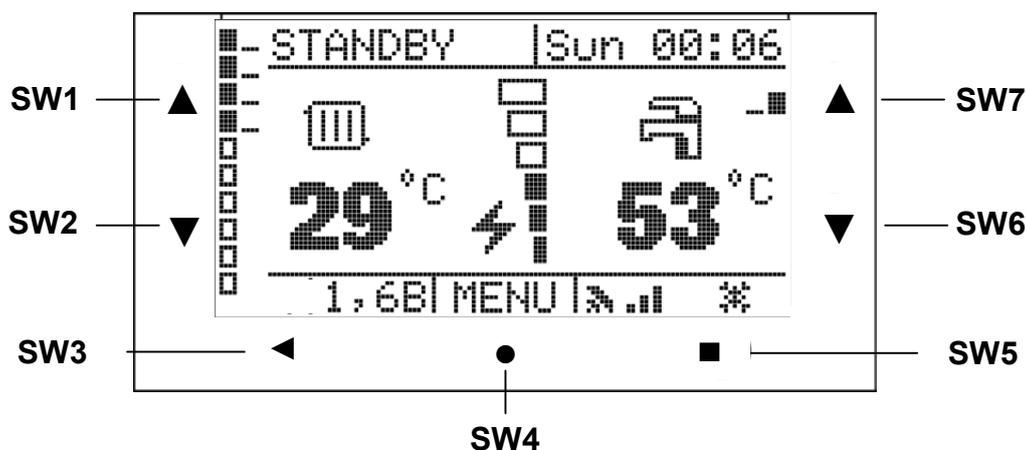

Key	Function
▲ left (sw1)	Display/Increase of the central heating system setpoint (or room temperature)
▼ left (sw2)	Display/Decrease of the central heating system setpoint (or room temperature)
◀ (sw3)	Safety thermostat error reset / back function
● (sw4)	Menù
■ (sw5)	ON/OFF switch - Summer - Winter "Comfort" function activation (extended pressure)
▼ right (sw6)	Display / Decrease of the water heater setpoint
▲ right (sw7)	Display / Increase of the water heater setpoint



Description of main screen keys:

▲ (SW1): Can be used to increase the central heating system temperature setpoint; the status bar shows " CH Set. ", and both the temperature setpoint value and the  icon will flash for 5 seconds.

▼ (SW2): Can be used to decrease the central heating system temperature setpoint; the status bar shows " CH Set. " and both the temperature setpoint value and the  icon will flash for 5 seconds.

If the board is set to manage two separate zones, at the end of the 5 seconds the status bar shows " CH Set. 2 ", at which moment it is possible to set the heating setpoint for the secondary system.

If operation with external probe (SE) is set on the board, using the " idx: 006 val:001 " parameter the ▲ (SW1) and ▼ (SW2) keys will allow to increase and decrease the room setpoint; the status bar shows " Room Set. " and both the temperature setpoint value and the  icon will flash for 5 seconds.

◀ (SW3): If the boiler has locked, press this button to attempt to release it.

WARNING: the locking function is a software function. Release can be attempted for a maximum of 5 times during a period of 15 minutes.

● (SW4): Can be used to access the " SETTINGS MENU ".

■ (SW5): Can be used to change the operating mode of the boiler: OFF, SUMMER, WINTER.

Press this key for more than 5 seconds to activate "comfort" mode: next to the  icon, the display will also show the  icon.

▼ (SW6): Can be used to decrease the sanitary hot water temperature setpoint; the status bar shows "DHW Set." and both the temperature setpoint value and the  icon will flash for 5 seconds.

▲ (SW7): Can be used to increase the sanitary hot water temperature setpoint; the status bar shows "DHW Set." and both the temperature setpoint value and the  icon will flash for 5 seconds.

The sanitary hot water (DHW) temperature can be changed regardless of the operating mode, winter or summer.

Heating system water pressure reading


The analogue hydrometer on the control panel has a bar dial from 0 to 6 bar. The current central heating system water pressure is indicated by the black needle. The optimum central heating system water pressure is between 1 and 1.5 bar. The pressure can exceed 1.5 bar, to a maximum of 2 bar (maximum expansion of the system during a temperature rise). Pressures over 2 bar are not within the operating range of the appliance. When this level is exceeded, the action of the pressure transducer will cause the display of the " ERROR F 10 " error message and the boiler will remain in operation. However, if the threshold of 2.8 bar is exceeded, the system stops until the pressure falls back within the allowed range. The minimum operating pressure is 0.8 bar (+/-0.2 bar). If the pressure detected by the transducer is less than 0.7 bar, the " ERROR F 1 " message appears and the operation of the system stops. The last safety feature of the boiler is the mechanical valve, which when a pressure of 3 bar is reached starts to release water through the **VSR** drain, the position of which can be found in the hydraulic connection diagram (see page 5).



SWITCHING ON THE BOILER

The boiler is switched on by pressing the luminous main switch found on the left of the display in the dashboard. If the boiler is connected to a single-phase power supply source, the button lights up when pressed (230-240 V - 50 Hz). After the short graphic presentation, set the day and time (if required) and choose summer/winter operating mode using the ■ (SW5) key at the bottom right (pressing again will switch off the boiler, while keeping it powered).

MAIN SCREEN

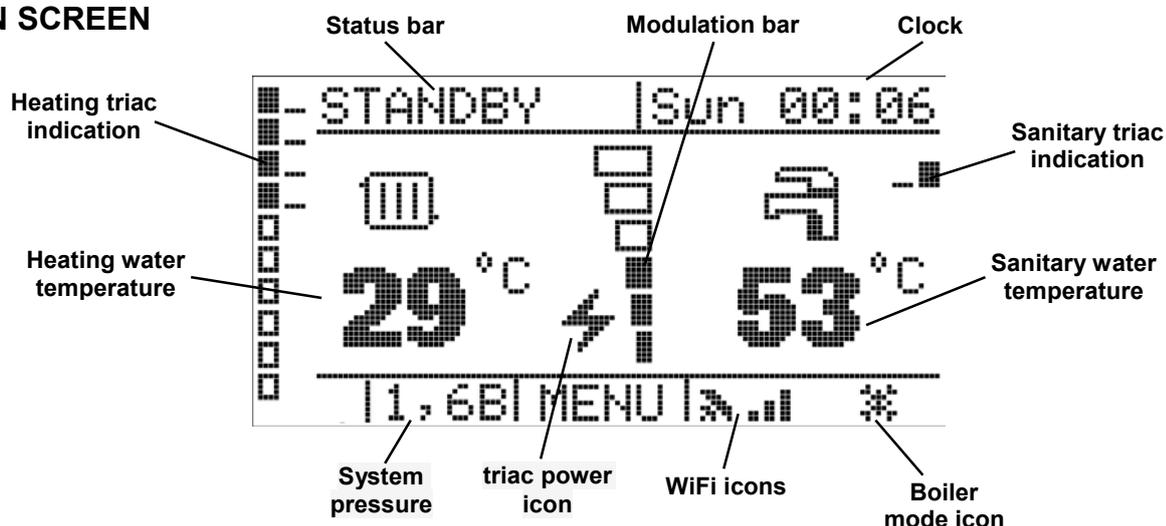

The status bar at the top shows the operating status of the boiler or, in case of fault, the fault code.

The table below shows all the possible status bar messages:

STATUS / DISPLAY	DESCRIPTION
STANDBY	No heat request received by the boiler
ANTI-FREEZE STATUS	Anti-freeze active
COMFORT MODE	"Comfort" mode active
HEATING STATUS	Heating active
ANTI-LEGIONELLA	Anti-legionella active
SANITARY WATER STATUS	Sanitary water active
OFF	Boiler OFF
TEST STATUS	Test active
CH set.	Central heating setpoint
CH set. 2	Central heating setpoint zone 2
DHW Set.	Sanitary hot water setpoint
Room Set.	Room setpoint
ERROR F X	Presence of fault or lock X
Communication error	No communication between the display and the boiler board NOTE: In the fault log, the communication error is assigned code 250
DEGAS. TIME XX:XX	"Degassing" function active and time to completion



During "STANDBY", the top right of the status bar shows the day of the week and the time. The value below the radiator icon is the temperature detected by the central heating system delivery probe, while below the tap icon is the temperature detected by the sanitary hot water system probe. The and icons flash in case of central heating system or sanitary hot water request.

If management with external SE probe is enabled (parameter menu "idx: 001 val: 001"), it is also possible to set the room temperature setpoint.

The screen will show the symbol instead of the symbol, and the room temperature setpoint instead of the central heating system delivery temperature. At the centre is a graduated bar that shows the operating power of the boiler. In case of heating request, the icon appears at the side of the bar.

The rectangles on the left of the screen show the status of the triacs powering the central heating system heating elements (full rectangle for active triacs and empty rectangle for triacs that are not powered). The lines next to the rectangles show the power output on each triac: 1 power line 1/2 kW, 2 power lines 3/4 kW and 3 power lines 6 kW.


	Active Triac operating a heating element with 6 kW power
	Active Triac operating a heating element with 3 or 4 kW power
	Active Triac operating a heating element with 1 or 2 kW power
	Triac not active

The right side of the screen shows the triac that powers the heating element of the sanitary hot water system. If active, the rectangle is full, otherwise it's empty. The small rectangles on the side show the power output (in this case only one of 2 kW). On the bottom left is the value of the system pressure detected by the pressure transducer and on the bottom right the current boiler operating mode (winter mode, summer mode).


SYMBOL	MODE	DESCRIPTION
	OFF	Central heating and sanitary hot water functions off.
	SUMMER	Central heating function off. Sanitary hot water function on.
	WINTER	Central heating and sanitary hot water functions on.

If "SUMMER" mode is selected in the main screen, the temperature detected by the delivery probe disappears and is replaced with the sun icon (see screen below).

If "OFF" mode is selected, the display shows the following:

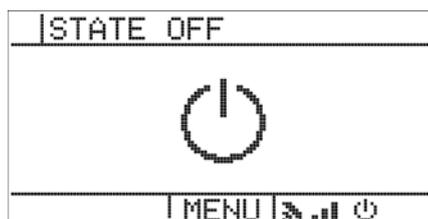


If the boiler is connected to a WiFi network, the following icons appear: . The graduated bar indicates the quality of the WiFi signal (3 bars very good, 2 bars medium, 1 bar poor). In the event of WiFi network or internet communication fault, these icons may start flashing or disappear. A detailed indication of the type of WiFi fault can be found under the "Info" item in the "WiFi Menu" discussed in the appropriate paragraph.

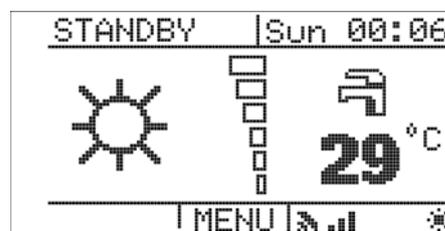



SETTINGS MENU

From the main screen, press ● (SW4) to access the " SETTINGS MENU ". The screen displayed will be as follows:

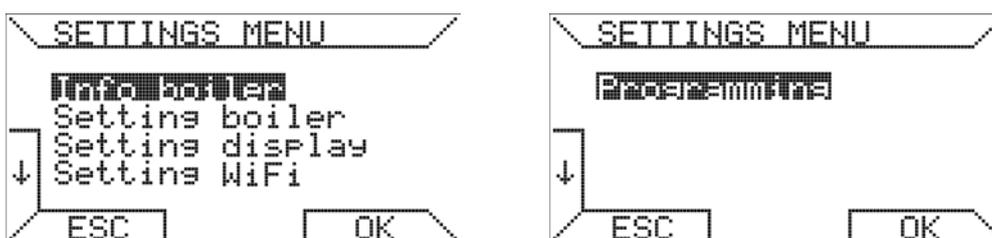

The keys take on different functions depending on the actual screen displayed. The frame at the edge of the screen allows to indicate which function the corresponding button is used for. Taking the above screen as an example, press ▼ (SW2) [↓] to select " Setting boiler ", or ◀ (SW3) [ESC] to return to the main screen, or ■ (SW5) [OK] to access the " Info Boiler " menu.

The table below describes the hierarchical system of the " SETTINGS MENU ":

SETTINGS MENU	Info boiler	
	Setting boiler	Installer menu Factory menu Device menu Faults history Degasser Boiler SW version Special functions
	Setting Display	Language Time setting Contrast Brightness Touch sensitivity Factory reset Data monitor
	Setting WiFi	Conn. method Server rate Start wizard Info WiFi WiFi monitor Password App Download certs
	Programming	Set program Day Copy Show program Temperature Set thermostat



Info boiler

INFO BOILER 1		
CH Temp.	:	31 °C
DHW Temp.	:	29 °C
Extern T.	:	-2 °C
↓ Th. Room	:	N.A.
ESC		

Select " Info boiler " in the " SETTINGS MENU " to view information regarding the devices connected to the boiler:

The table below summarizes all the possible devices that can be displayed in the " Info boiler ", their description, and the values that they can assume:


INFO BOILER	INFORMATION	DESCRIPTION / VALUES
1	CH Temp	Temperatures detected by the delivery probe (SM)
	DHW Temp.	Temperature detected by the sanitary hot water tank probe (SB)
	External T.	Temperature detected by the external probe (SE)
	Th. Room	Room thermostat (TA) status: ON: Closed - OFF: Open
2	Th. Safety	Safety thermostat (TS) status: ON: Closed - OFF: Open
	OpenTherm	OpenTherm communication status: ON: Active - OFF: Not active
	RS 485	RS485 communication status (cascade):
	Press.H2O	Water pressure switch status (if present): ON: Closed - OFF: Open
3	Flow H2O	Sanitary water system flow meter value
	Circulator	% System circulator speed
	Diverter valve	Diverter valve status: ON: Active - OFF: Not active
6	Th. Room2	Secondary zone room thermostat status: ON: Closed - OFF: Open
	CH Temp2	Temperatures detected by the secondary zone probe
7	Circ feedb	
	Pump Zone 1	Primary zone pump status: ON: Active - OFF: Not active
	Pomp Zone 2	Secondary zone pump status: ON: Active - OFF: Not active
	Mix closing	Mixing valve closing status: ON: Active - OFF: Not active
8	Mix Opening	Mixing valve opening status: ON: Active - OFF: Not active
3	Gate 1	Power in kW of triac number 1
4	Gate 2	Power in kW of triac number 2
	Gate 3	Power in kW of triac number 3
	Gate 4	Power in kW of triac number 4
	Gate 5	Power in kW of triac number 5
5	Gate 6	Power in kW of triac number 6
	Gate 7	Power in kW of triac number 7
	Gate 8	Power in kW of triac number 8
	Gate 9	Power in kW of triac number 9
6	Gate 10	Power in kW of triac number 10
	Gate S	Power in kW of triac S (sanitary hot water triac)

N.A: " N.A " on the side of the device indicates that the device is not active or not installed in the system.



Setting boiler

The second item " **Setting boiler** " of the " **SETTINGS MENU** " can be used to view and modify the boiler and central heating system setting parameters. The parameters and their meanings are described in detail in the relevant paragraph.

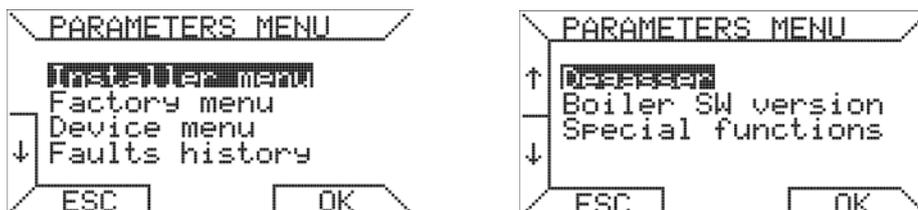

The menus for setting the boiler and heating system parameters have been sorted into sub-menus according to the type of setting and access right.


The " **Installer menu** " only contains the essential parameters for the configuration of the boiler type.




When accessed, this menu shows the " **Read parameter** " screen:

where the parameter index is shown on the left and its current value on the right. The value does not appear instantaneously but is transferred each time from the control board of the boiler. Before its appearance, three dashes will be displayed for a few moments " --- ". Press ▼ (SW6) [↓] and ▲ (SW7) [↑] to scroll through the entire list of parameters. Press ■ (SW5) [SET] to access


the parameter edit screen. Finally, press ◀ (SW3) [ESC] to return to the " **PARAMETERS MENU** ".

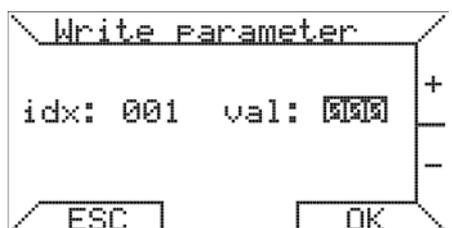


In the " **Write parameter** " screen, the index is blocked and the value is highlighted. Press ▼ (SW6) [-] and ▲ (SW7) [+] to change the parameter value, followed by ■ (SW5) [OK] to save the new value. Press ◀ (SW3) [ESC] to return to the " **Read parameter** " screen without changing the parameter.

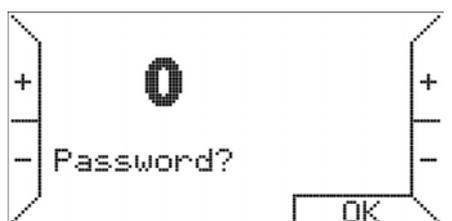

Access to the other sections of the " **PARAMETERS MENU** " (" **Factory menu** ", " **Device menu** ") is password protected, meaning that the correct password must be entered in the password screen.

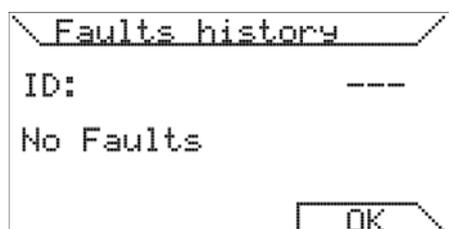


Accessing " **Faults history** " allows to view the list of the faults occurred in the boiler. If there are no faults, the following screen is displayed.

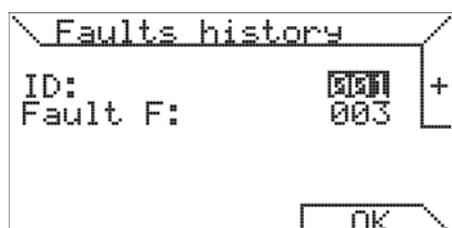

In case of fault or lockout, the above screen is updated as follows:


(ID: Index ID of the fault occurred), (Fault F: fault or lockout code).

Faults are indexed in succession starting with " ID: 001 ". Each time there is a new fault the previous ones are moved upwards, up to a maximum of 10. After that, every time there is a new fault the oldest one is deleted.

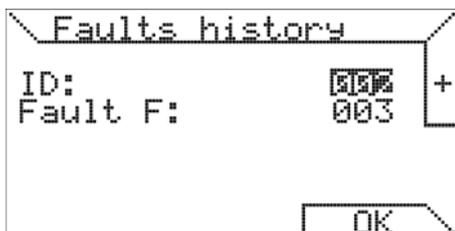


Press ▲ (SW7) [+] and ▼ (SW6) [-] to scroll through the faults occurred.

The " **Degasser** " option allows to activate the boiler circulator, to remove air residues from the system. Also in this case, ▼ (SW6) [-], ▲ (SW7) [+] and ■ (SW5) [OK] can be used to activate or deactivate the function.

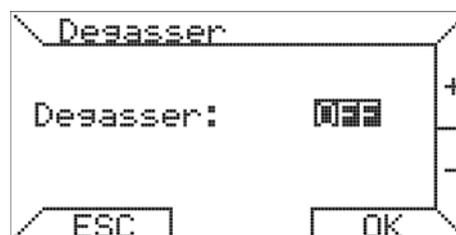


During this function, the PWM circulator maximum and minimum speed operating statuses are alternated, in order to facilitate the escape of air bubbles from the hydraulic circuit. The sequence is illustrated below.

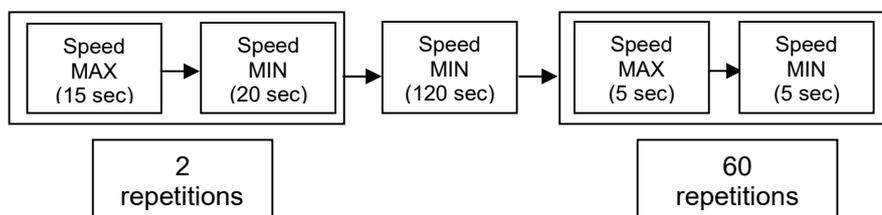

When this function is active, a timer appears on the display to indicate the time required to complete the function. The deviation valve is placed in a heating position (CH).



Under " **Boiler version** ", it is possible to view the version of the software loaded on the boiler control board.

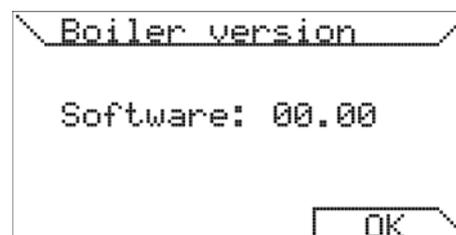


The last item, " **Special functions** ", is password protected and is used to activate the boiler demo mode. During demo mode, fictitious information is shown on the display so that, for example, it is possible to simulate running with triacs activated, without them actually being powered.

Setting display

The third item of the " **SETTINGS MENU** " can be used to change the display settings. In the first screen, it is possible to change language, time, contrast and brightness. In the second screen, it is possible to change the touch sensitivity, perform a factory reset and monitor the serial communication between the display and the board of the boiler.

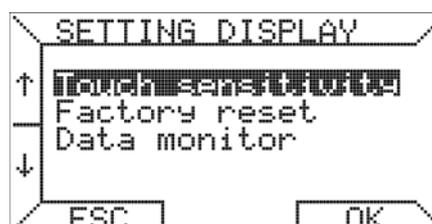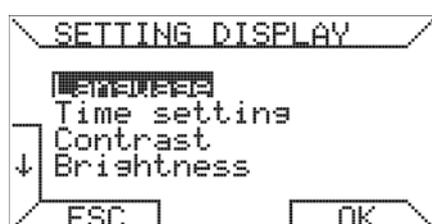

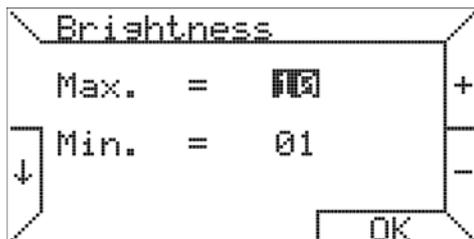


In the " **Brightness** " option, it is possible to set the maximum intensity and also the minimum idle intensity, which activates when the display remains inactive for one minute.

The parameters set in the " **Setting Display** " menu are stored in the memory and are preserved in case of power failure. To restore the factory default values, simply go to " **Factory reset** " and press ■ (SW5) [OK].




After a reset, the language selection menu will appear on the display.

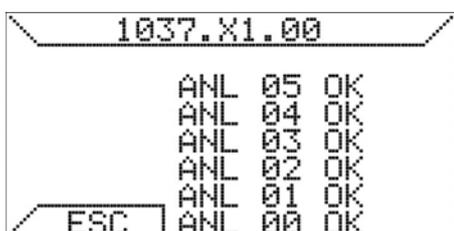

The " **Data monitor** " option allows to check the communication between the display and the board of the boiler. The following screen appears: in which the status of the exchanged data is shown next to the index on each line. If the data has been exchanged correctly, " **OK** " will appear; errors will be indicated with the " **ERR** " message. If no data exchange is detected, the " **TIME** " message will appear. The top of the screen also shows the software revision of the display.


Setting WiFi

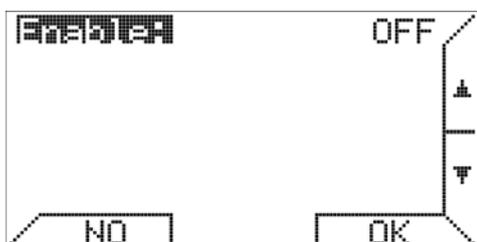

The WiFi menu can be used to manage the WiFi connectivity settings. In specific, it is possible to complete the network connection procedure, set the data transfer rate (Server rate), display the MAC address of the WiFi module and the IP address assigned by the network. The first time it is accessed, the " **Setting WiFi** " screen looks as shown below:



Touch the ■ (SW5) [OK] key and the ▼ (SW6) [↓], ▲ (SW7) [↑] keys, followed by ■ (SW5) [OK] again to activate the WiFi connection. The following additional items will be added to the screen:

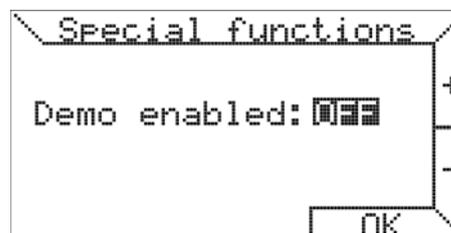

The second row shows the " **Id** " address of the WiFi module installed on the boiler. The third row is used to select the method for connecting to the network. The available choices are " **SCAN** " and " **PROV** " (provision).

If " **SCAN** " is selected, after launching the connection procedure with the fourth item " **Start wizard** ", a network selection screen will appear, followed by a screen for entering the network password.



The " **PROV** " method requires a smartphone to perform the procedure. The steps are as follows:

1) Select the fourth item " **Start wizard** " so that the boiler can generate a local network under the name " **CHRONO WIFI** ".

The display will show " **WAITING CREDENTIALS** ".

2) In your smartphone, go to the WiFi network settings menu and select the "**CHRONO WIFI**" network created by the boiler, entering the network password **1234567890**.

3) Your smartphone will open a web page in your browser where you can select the network (SSID) to which you want to connect the boiler. If the web page does not open automatically, open your smartphone browser and enter **www.chronowifi.com**.

4) Touch the "Refresh" button in the "**Detect device**" section to update the networks detected by your smartphone.

5) When you select the network in the "**Detect Device**" section, it will appear in the "**Network Name**" window.

6) Enter the password in the "**Pass phrase**" box. Enter a name of your choice in the "**Device Name**" box. Touch "**Connect**" button to initiate the connection.

7) The display screen of the boiler will show " **CREDENTIALS OK** ". Touch ■ (SW5) [OK] on the display and wait for the connection to the WiFi network to be established.

The screenshot shows a mobile interface for connecting to a network. It has a blue header with the text 'Connect to Network'. Below this, there are three text input fields labeled 'Network Name', 'Pass phrase', and 'Device Name'. Under the 'Device Name' field is a blue button labeled 'Connect'. At the bottom of the screen, there is a section titled 'Detect Device' with a blue button labeled 'Refresh' below it.

Continuing with the WiFi setting procedure, in " **Server rate** " it is possible to select the data transfer speed between the boiler and the smartphone.

The possible alternatives are " **MIN** " (minimum), " **NORM** " (normal), " **SMART** " (smart), " **MAX** " (maximum). " **MAX** " will ensure very fast transfer speed, but will also result in higher consumption.

The fifth item " **info WiFi** " shows further information regarding the WiFi communication status. In particular:

STATUS: the network status (connection enabled STATUS=1 otherwise STATUS=0).

SSID: the name of the connected network.

IP: the IP address assigned by the DHCP server to the boiler.

SIGNAL: the signal strength detected by the boiler.

PING: the time required to transfer data from the boiler to the server and back. If the communication is good, the ping time (milliseconds) will be shown, otherwise in case of error there will be a fault notification.

GMT: the Greenwich Mean Time.

A signal greater than -40 dB is excellent (4 notches), a signal between -55 and -40 dB is good (3 notches), a signal between -70 and -55 dB is discreet (2 notches), a signal between -85 and -70 dB is poor (1 notch) and a signal less than -85 dB is insufficient (0 notches).



WARNING:

- **The proxy server is not supported.**
- **Only 2.4GHz WiFi networks are supported.**
- **To optimize its operation, it is recommended to install the boiler where the detected signal is at least -60dBm.**
- **The password entered when using the SCAN method must not exceed 40 characters.**
- **When using the smartphone connection method (PROV), only networks with OPEN or WPA-personal security may be connected.**
- **Moreover, the smartphone connection method (PROV) only allows one device at the time to be connected to the network generated by the boiler. When switching to a new device, the " Start connection " procedure must be repeated.**
- **WPS connection is currently not implemented.**

All basic router settings are normally accepted. However, if such settings are changed, it must be remembered that:

- **MAC filtering must be disabled or, if enabled, it must allow connection with the MAC address of the boiler (this information is under " Id " in the " Setting WiFi " menu).**
- **Check that the generated network has a frequency of 2.4GHz.**
- **Make sure that the DHCP server is enabled on the IPv4 version.**
- **Check that wireless scheduling is compatible with the expected time of use of the hot air generators.**

Returning to the " Setting WiFi " screen, the second page I will offer further options:

1) The first option, " **WiFi monitor** ", opens a screen where it is possible to view further WiFi connectivity information.


In particular, in the first row shows the " **WiFi** " connectivity status:

WiFi DISCONNECTED: means the that boiler is not connected to the WiFi network.

WiFi CONNECTED: means that the boiler is ready to accept modifications through the smartphone app.

WiFi HOME: means that the boiler has priority as far as the changing of the parameters. If no keys are touched for one minutes, the status switches to " **WiFi CONNECTED** " and the boiler is ready to accept changes through the smartphone app.

WiFi DEVICE: indicates that the smartphone is changing parameters on the boiler. One minute after the last change made through the smartphone application, the status switches to " **WiFi CONNECTED** " and the boiler is ready to accept new changes, including from a different smartphone.

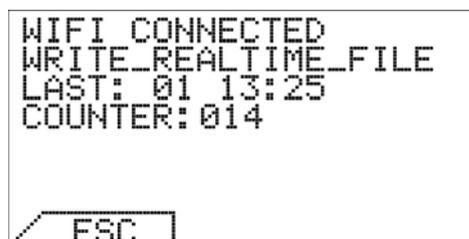

2) The second row shows if the boiler is reading or writing from the server.

3) The third row, " **LAST** ", shows the day and time when the last change was made through the smartphone application: " **0** " means Sunday, " **1** " means Monday, and so on.




4) The fourth row, " COUNTER ", is a counter indicating the number of parameter changes made through the smartphone application. When the meter reaches " 999 ", the counter is reset to zero.

Always in the second page of " Setting WiFi ", the " Password App " option can be used to change the password for accessing the smartphone application and control the operation of the boiler (the default password is " 0000 "). **It is recommended that the password is changed once the boiler is connected to the WiFi network.**


After launching the "MyBoiler" smartphone application (free to download from the Android and iOS stores), it will be necessary to enter the MAC address of the boiler (" Id: f8f005xxxxxxx ") and the password in order to connect.

The same password may be required by technical support if the user wishes to use the remote technical support service. In this case, the user gives to technical support the MAC address of the boiler and the password in order to allow them to connect remotely and check the operation and any faults.

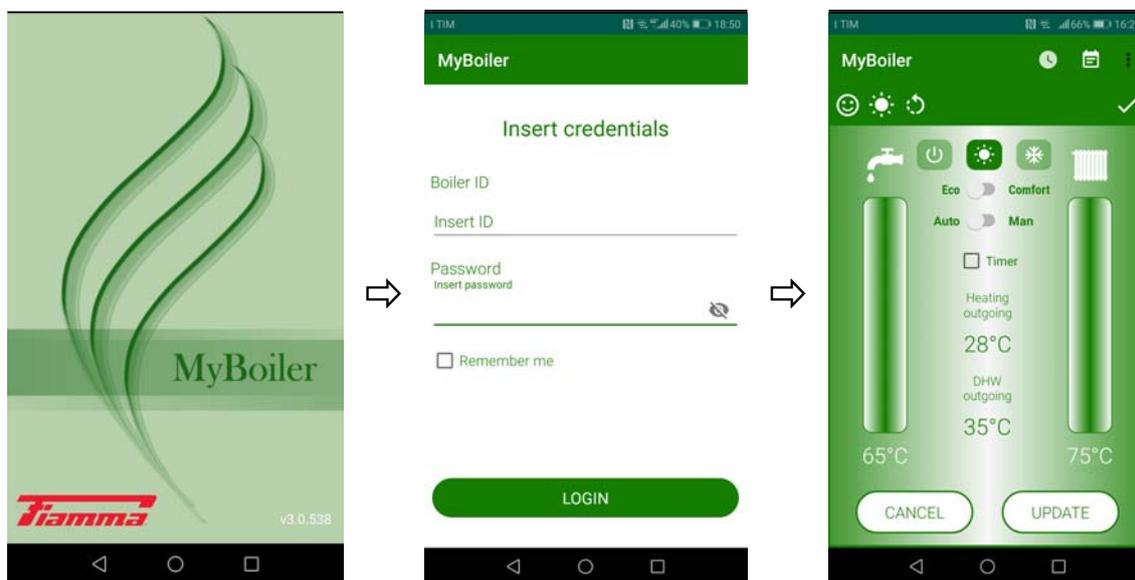

The last Option " Download certs " allows to load the "Certificate Authority" certificates using a special cable connected to a PC. This is useful if the boiler must be connected to a network with WPA/WPA2 Enterprise security. This operation should be completed by an authorised network administrator.

Programming

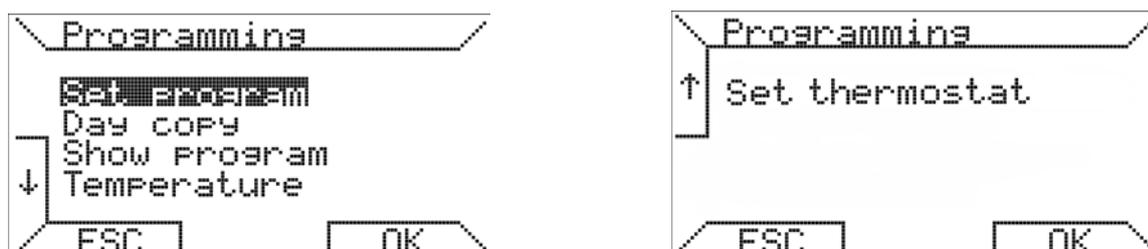

The " Programming " menu allows to manage weekly schedules. In this way, the boiler communicates the ON request following the set daily program. Time resolution is 30 minutes. Selecting " Set program ", in the " Programming " sub-menu will open a screen where it is possible to change the weekly schedule.




In the " Day " row, use the ▲ (SW7) [+] and ▼ (SW6) [-] keys to select the day of the week to program. A reminder of the corresponding daily program is shown underneath.


Taking " Monday " as an example, touch ■ (SW5) [OK] to enter time band programming.

The time bands are programmed in three steps:


- 1) Time band start (to select band start time)
- 2) Request (to set the heat request)
- 3) Time band end (to select the band end time)

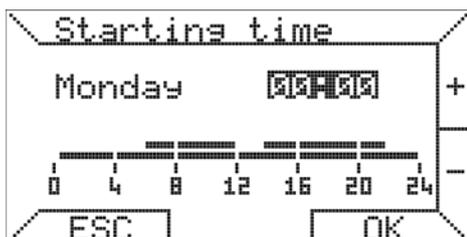

In the first step, enter the start time using the ▲ (SW7) [+] and ▼ (SW6) [-] keys, with minimum intervals of 15 minutes, and confirm by touching ■ (SW5) [OK]. To abandon the programming for the selected day and switch to another day, simply touch ◀ (SW3) [ESC].

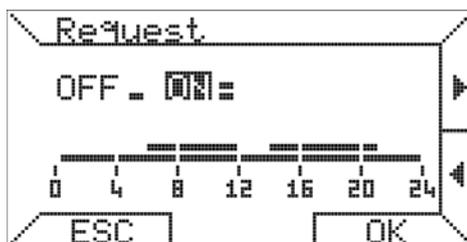


Then set the heat request, either " ON " or " OFF ", moving around the display using the ▲ (SW7) [▶] and ▼ (SW6) [◀] keys to select, followed by ■ (SW5) [OK] to confirm, or ◀ (SW3) [ESC] to change the band start time.

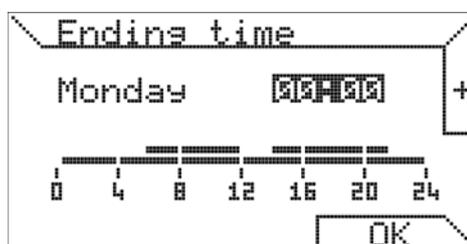


In the last step, select the time band end time and confirm using ■ (SW5) [OK].

The time band end time cannot be before the time band start time; if the same time is selected as start and end time, the daily program is not updated.

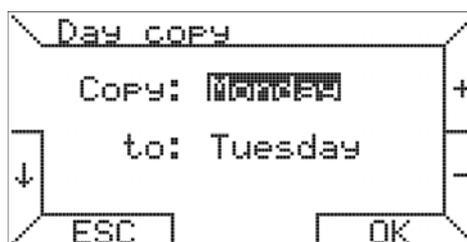


The second item of the " Programming " menu allows to copy a program of one day to another day, by selecting the source day from which to copy at the top and the destination day to which to copy at the bottom.

To set the same program for every day, simply select " ALL ". When the ■ (SW5) [OK] button is pressed, a message confirms that the program has been copied.


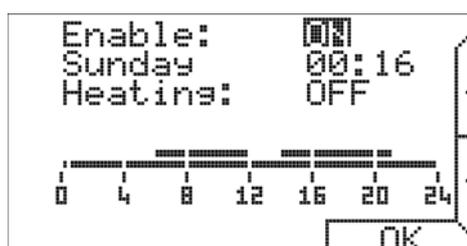


The third item of the menu, " Show program ", allows to activate the weekly program and display some information, including the current time, the status of the heat request and the daily graph for the current day. It will then be necessary to set the weekly program to " ON " in order to activate it. This screen remains fixed until the ◀ (SW3) button is pressed [ESC].

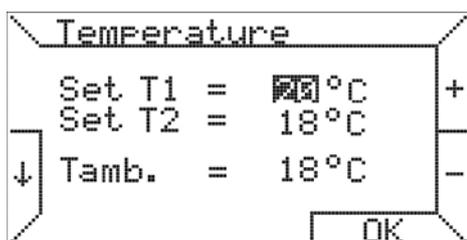

The "Temperature" option allows you to set up two ambient temperature setpoints (T1 and T2) to manage the boiler burner ignition request if the latter equipped with an ambient probe, according to the pre-established rules managed by the boiler control unit. In addition, the temperature detected by the room probe connected to the PCB (Tamb) appears.

The last item, "Set thermostat", allows to choose whether to link the request of switching on of the boiler in heating mode issued by the current daily program with the status of the room thermostat on the board.

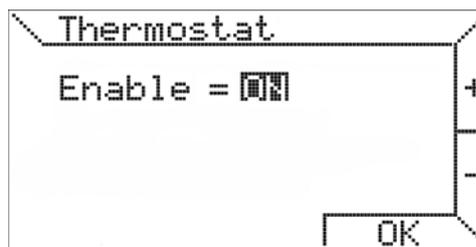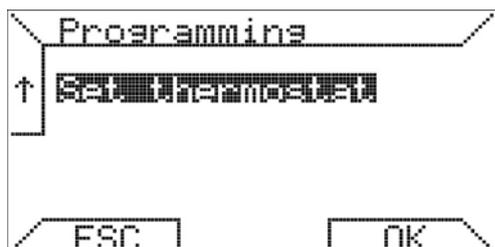

In particular, within the "Set thermostat" item, if the "Enable" option is **ON**, the boiler heating request generated by the daily program, will be taken into consideration by the boiler board only if the room thermostat is closed. In order for the "ON" operating logic to function correctly, the board must also support this operating logic, since it accepts or rejects the ignition request from the program according to the state of thermostat TA.

The table summarizes the operating logic **ON** also called **AUTO** in the smartphone APP:

Heating request command by Boiler or APP	State of TA	Operation of the boiler in heating mode
0	0	0
0	1	0
1	0	0
1	1	1

Otherwise, if the "Enable" option is **OFF**, the boiler will be switched-on in heating mode, in the presence of a request from the daily program regardless of the status of the room thermostat. The table summarizes the **OFF** operating logic or also called **MAN** in the smartphone APP:

Heating request command by Boiler or APP	State of TA	Operation of the boiler in heating mode
0	0	0
0	1	1
1	0	1
1	1	1

INTERNAL POWER RESERVE

The display has an internal back-up power reserve that can counteract the absence of power for a few hours, so that the user will not have to reset the current time. However, the duration of the power reserve is variable depending on the humidity and the ambient temperature, as well as the age of the electronic components. For the power reserve to be fully operational, the device must have been correctly and continuously powered for at least two hours.



STORING DATA IN THE MEMORY

If even the internal power reserve described in the above paragraph is exhausted, the display still saves some settings and data in the memory: display settings, WiFi settings, weekly program and fault log.

It is possible to restore all the settings to the default values using the " **Factory reset** " submenu in the " **SETTING DISPLAY** " menu.

WARNING: Pressing the "Reset" key on the back of the display will not restore the factory settings.

BACKLIGHTING AND LED


The brightness of the display switches to maximum when a key is pressed, and returns to the minimum value set one minute after the last pressing of any keys. For energy efficiency purposes, after one minute only the LED under the ◀ (SW3) key remains on. In case of fault or boiler lock, all the LEDs come on and the LED under the ◀ (SW3) key flashes. In case of boiler lock, the display shows " Res. ". Use the ◀ (SW3) key to unlock the components that control the operation of the boiler.

TOUCH SCREEN CALIBRATION

A touch key calibration is completed the first time the power is switched on. Do not touch any keys until the language selection screen appears. In case of problems with the sensitivity of the touch keys after the first switch on, try to reset the display with the "Reset" button on the back.

INSTALLATION WARNINGS


Observe the applicable national and European standards (e.g. EN60335-1/prEN50165) relating to electrical safety. Check the cables carefully before putting the boiler into operation; incorrect wiring can damage the devices and compromise the safety of the system. Enable and disable the control system only when there is no voltage. Avoid exposure of the system to water drops.

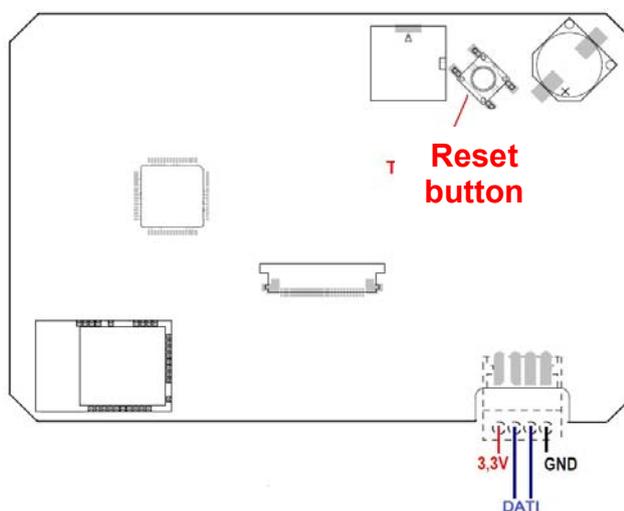



INSTALLATION TECHNICAL NOTE FOR THE INSTALLER AND THE MAINTENANCE TECHNICIAN.

PLUMBING DIAGRAM (version: Elektra EASY BP 12 kW *Sky Touch*)

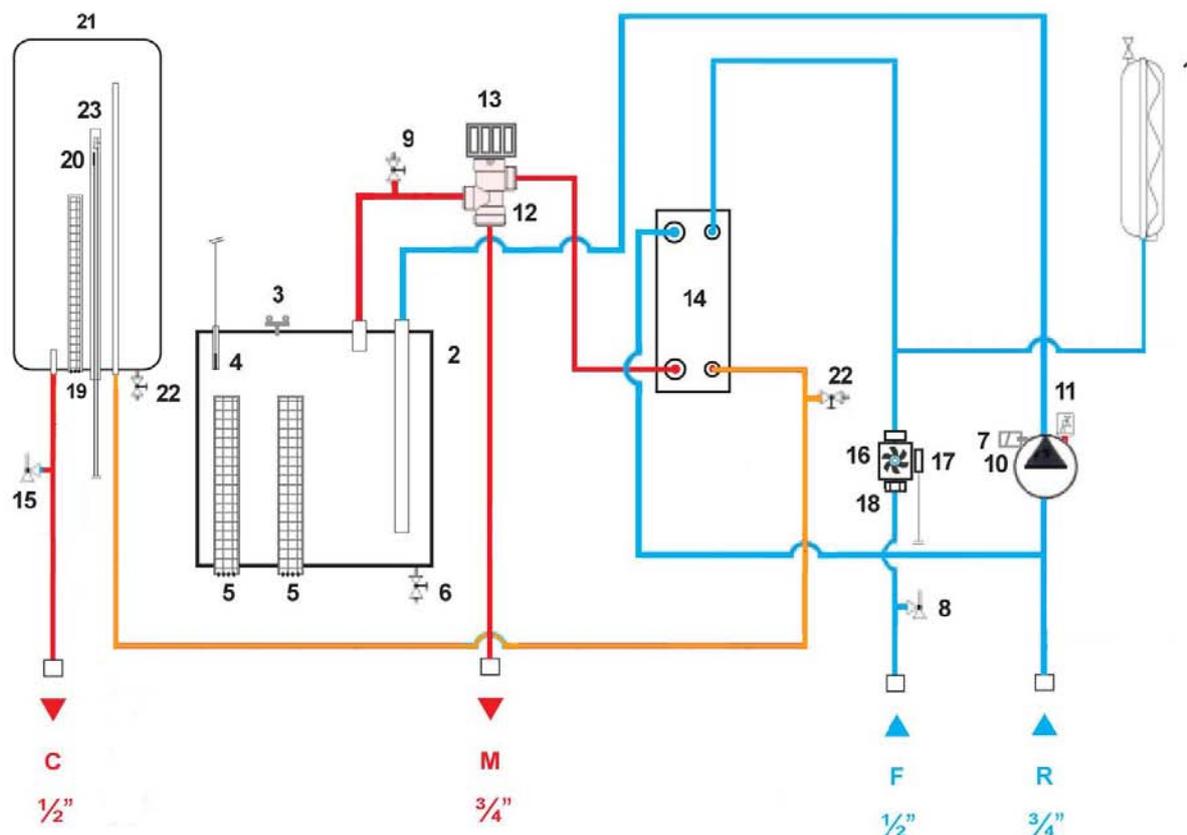


SYSTEM DIAGRAM LEGEND:

- | | |
|---|---|
| 1 Central heating circuit expansion tank 9 litres | 16 Sanitary water flow regulator tap |
| 2 Electric boiler body | 17 Sanitary water flow meter |
| 3 Bimetal safety thermostat 100°C | 18 Sanitary water flow meter probe |
| 4 Central heating water temperature probe | 19 Sanitary water storage tank ceramic heating element 2/3 kW |
| 5 Heating elements 3/6/9 kW - 230V/50Hz | 20 Sanitary water storage tank safety thermostat |
| 6 Boiler body drain tap | 21 Vitrified sanitary water storage tank 37 litres |
| 7 Pressure transducer | 22 Tank exhaust tap |
| 8 Safety valve 3 bar (central heating) | 23 Sanitary water storage tank temperature probe |
| 9 Exhaust tap (air vent) | |
| 10 Variable head circulator | |
| 11 Automatic vent valve | |
| 12 3-way electric diverter valve | |
| 13 diverter valve actuator (motor) | |
| 14 Stainless steel plate heat exchanger | |
| 15 Safety valve 6,5 bar (sanitary water) | |
-
- | |
|-----------------------------------|
| R Central heating system return |
| F Sanitary cold water inlet |
| M Central heating system delivery |
| C Sanitary hot water output |





WIRING DIAGRAM (single phase)

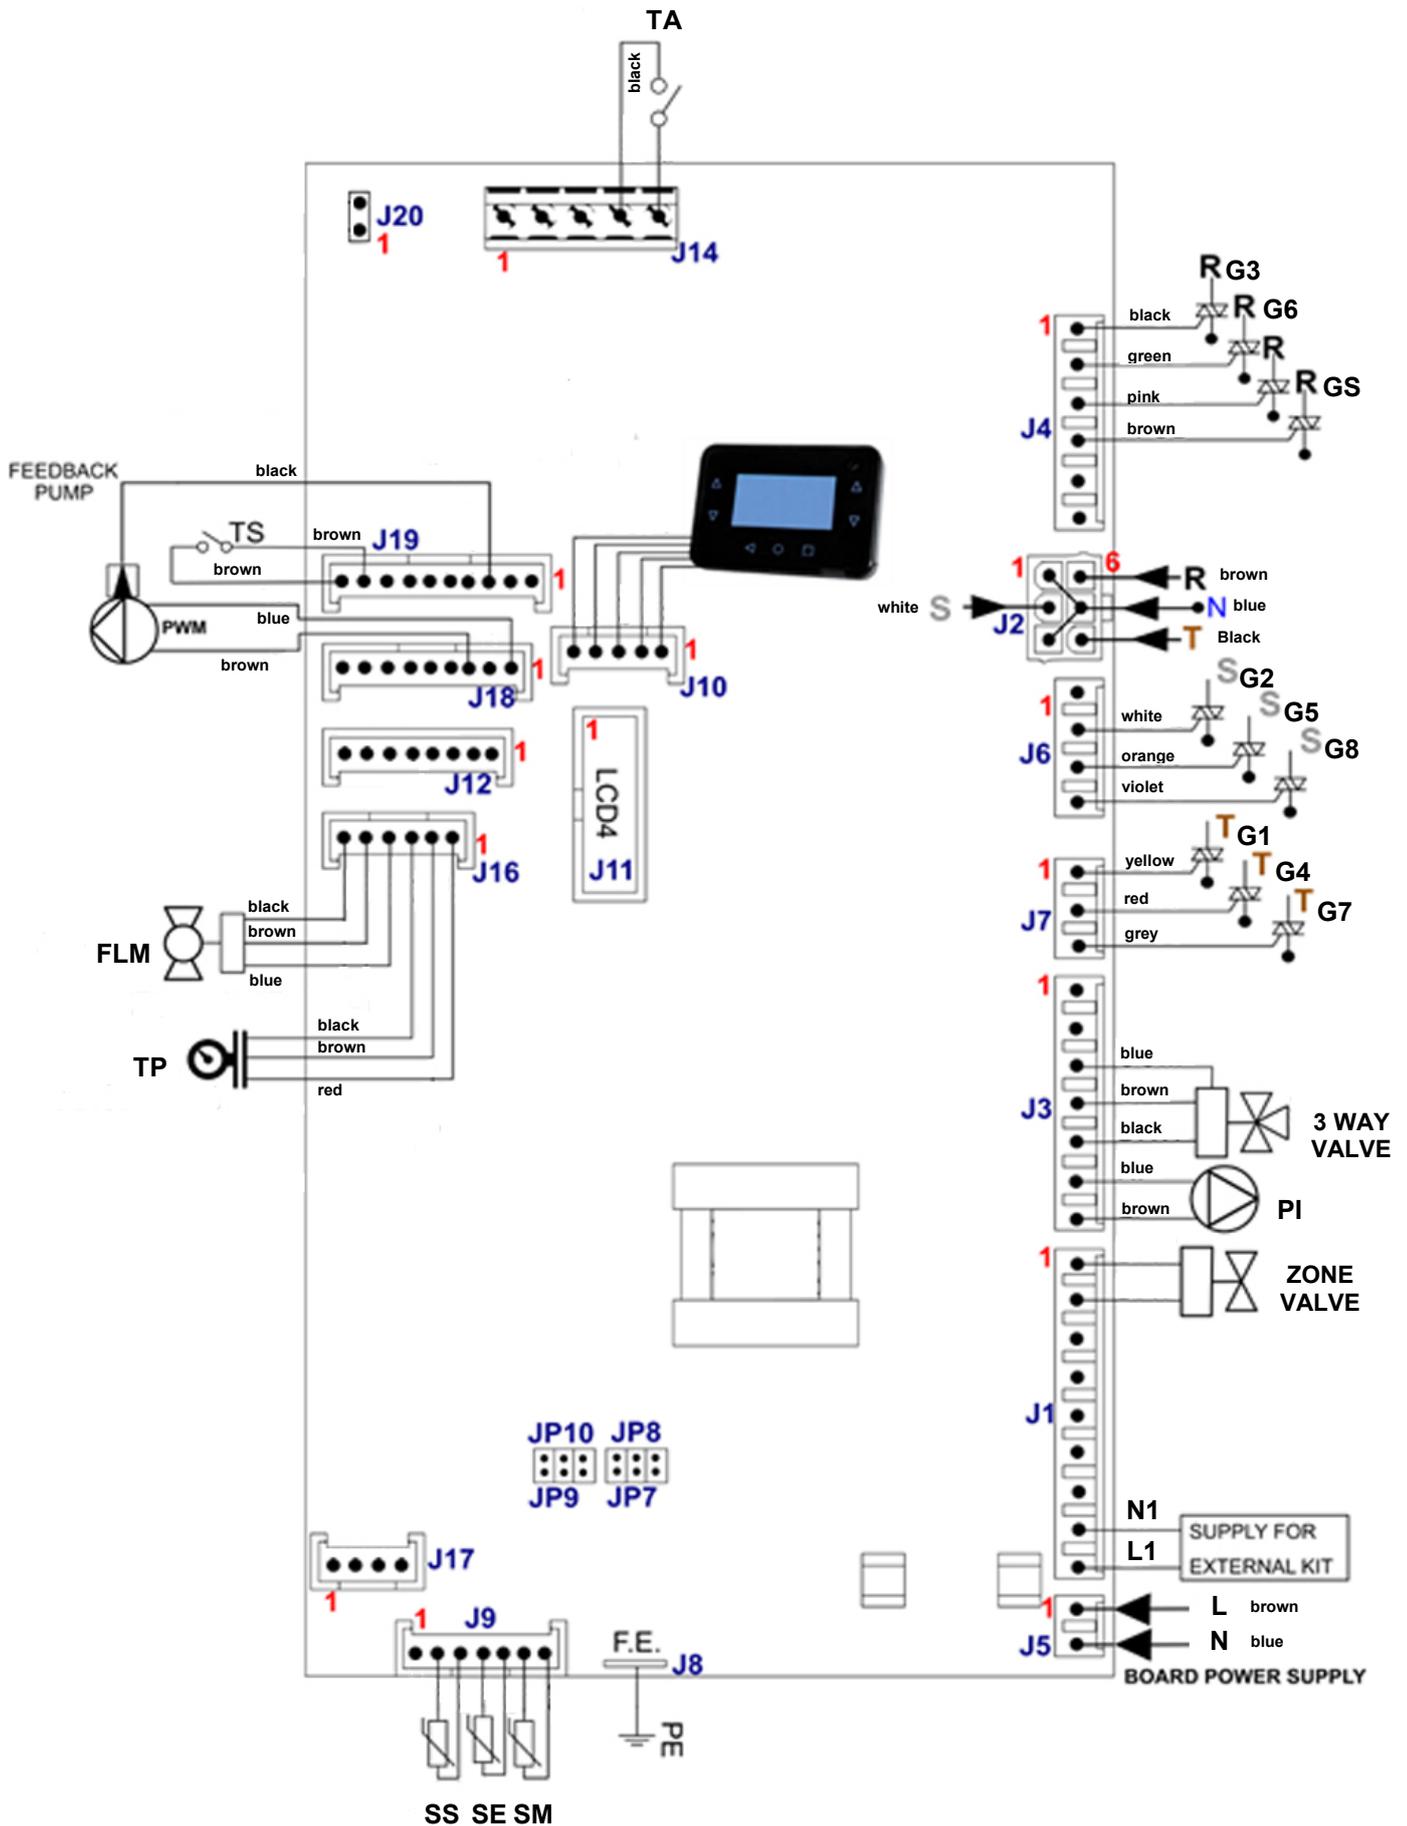




TRIAC - Wiring diagram

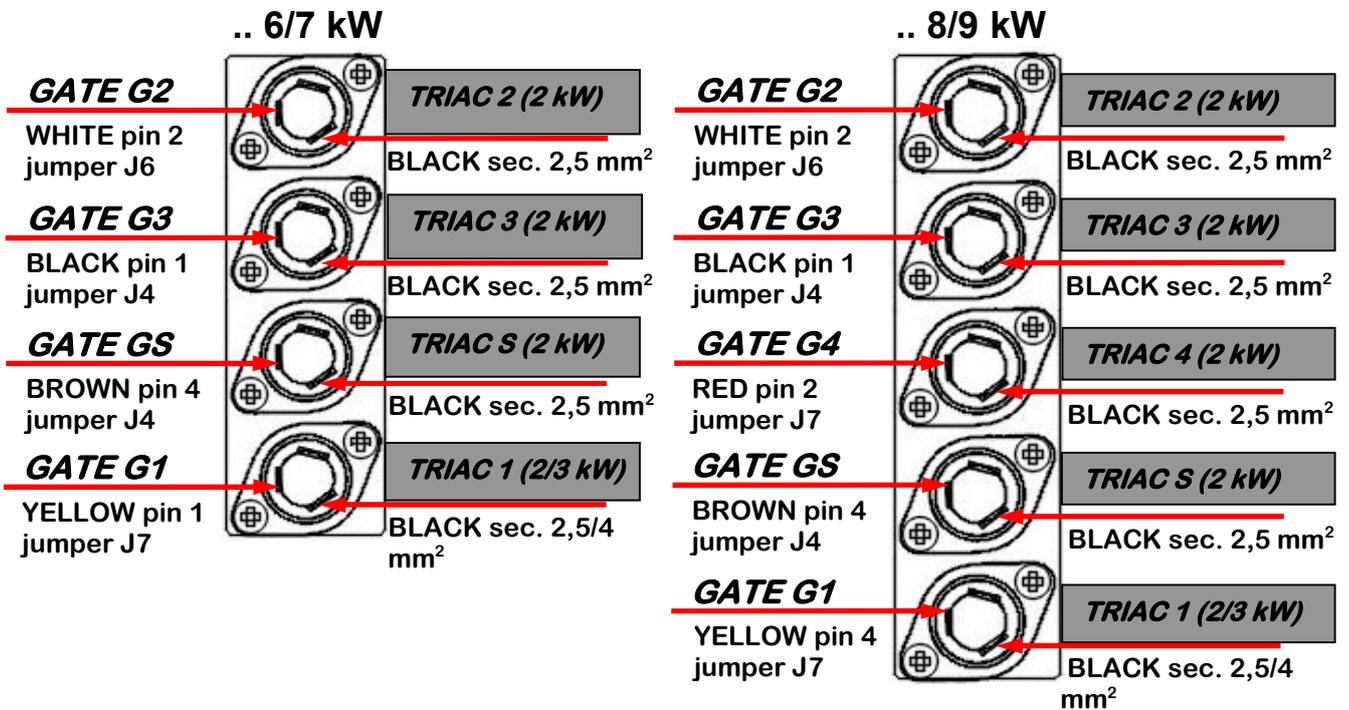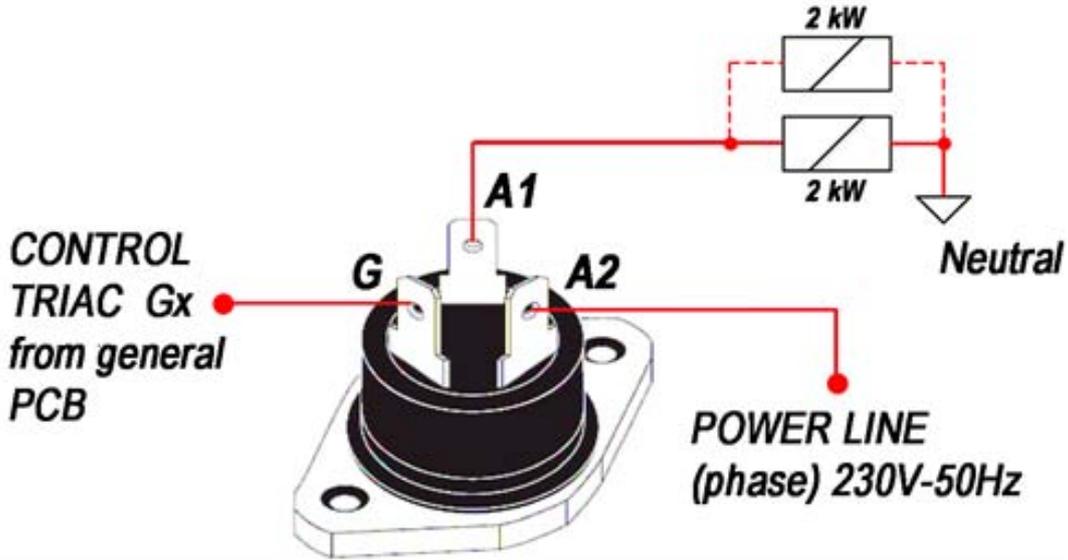





TRIAC - Wiring diagram

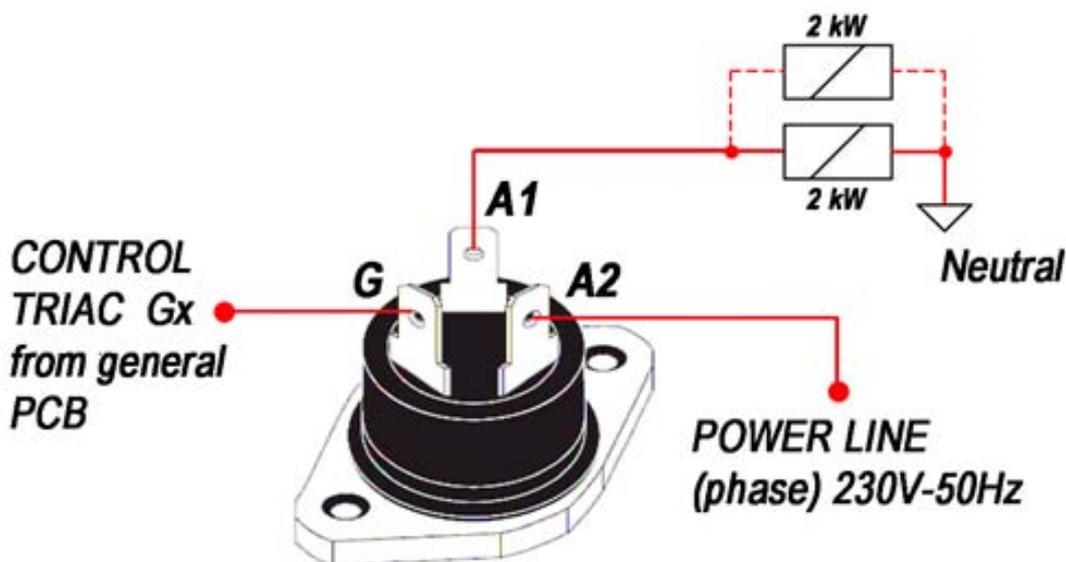

.. 12 Kw

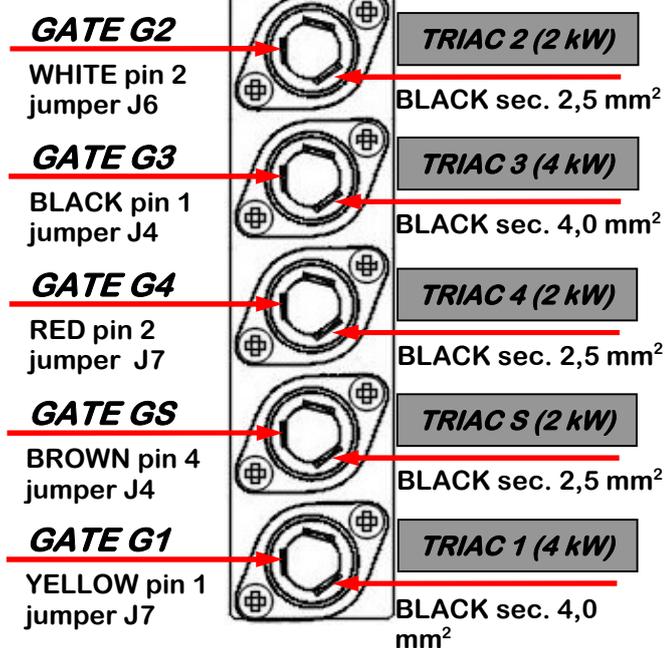

..15/18 kW

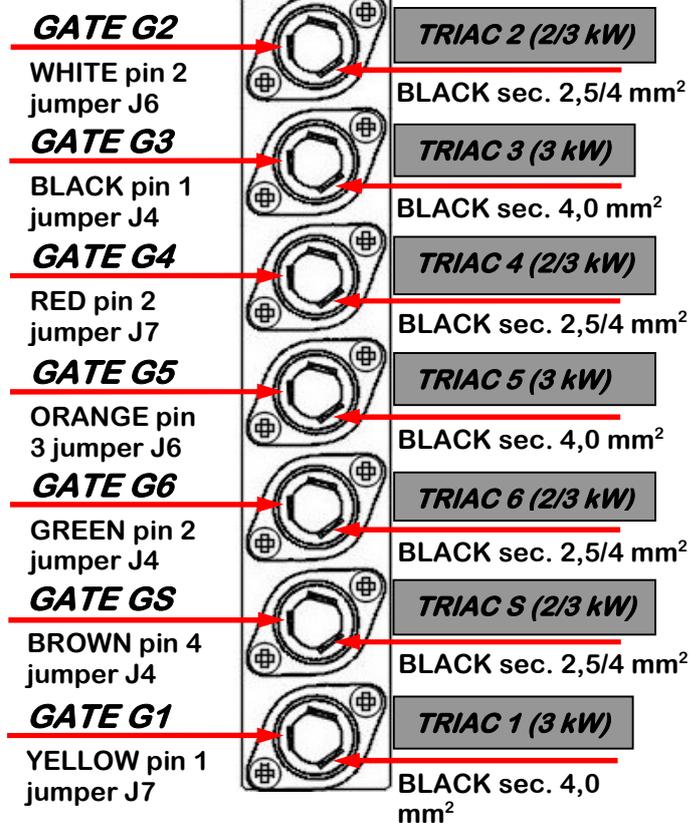



FACTORY CONSTANTS

Function	Value
Anti-legionella range temperature	65 °C
Anti-legionella activation interval	7 days
Maximum primary circuit temperature	80 °C
Circulator lock prevention operation time	10 sec
Circulator lock prevention activation time	24 hours
Anti-freeze temperature On (circulator only)	< 8 °C
Anti-freeze Temperature On (circulator and power)	< 5 °C
Anti-freeze Temperature Off	> 20 °C

SETPOINTS AND PARAMETERS

Function	Default	Range
Central heating setpoint	60 °C	30 - 75 °C
Underfloor central heating setpoint	30 °C	10 - 40 °C
Room setpoint (with external probe present)	20 °C	10 - 30 °C
Sanitary water storage tank setpoint	60 °C	30 - 65 °C

PARAMETERS

Function	Display	Def.	Range
External probe enable (SE)	idx: 001	0	0 - 1
Building dispersion coefficient	idx: 002	35	5 - 35 °C
Sanitary water post-circulation duration	idx: 003	15	1 - 180 sec
Central heating post-circulation duration	idx: 004	30	1 - 180 sec
Primary exchanger ON delay	idx: 005	0	0 - 240 sec
Sanitary water delivery differential	idx: 006	15	0 ÷ 20 °C
PWM circulator operation speed	idx: 007	4	1 = 400 l/h 2 = 800 l/h 3 = 1,000 l/h 4 = 1,200 l/h
Min. temperature of primary exchanger for circulator ON	idx: 008	30	0 - 50 °C
Type of sanitary water storage tank	idx: 009	0	0 = internal with probe 1 = external with thermostat 2 = external with probe
Type of sanitary water request sensor	idx: 010	1	0 = flow switch + three-way pneumatic 1 = flow meter + three-way electric
Boiler power selection	idx: 011	2	1 - 8
System pressure sensor type	idx: 012	1	0 ÷ 2




Power configuration Parameter 11								
Value idx: 011	Total power [kW]	N. TRIAC	N. of heating elements used and power of each element	G1 [kW]	G2 [kW]	G3 [kW]	G4 [kW]	GS [kW]
001	6	4	n°. 2 heating elements, power 3 x 1kW	2	2	2	-	2
001	7	4	n°. 1 heating elements, power 3 x 1kW n°. 1 heating elements, power 3 x 2kW	3	2	2	-	2
002	8	5	n°. 1 heating elements, power 3 x 1kW n°. 1 heating elements, power 3 x 2kW	2	2	2	2	2
002	9	5	n°. 1 heating elements, power 3 x 1kW n°. 1 heating elements, power 3 x 2kW	3	2	2	2	2
002	12	5	n°. 2 heating elements, power 3 x 2kW	4	2	4	2	2
Value idx: 011	Total power [kW]	N. TRIAC	N. of heating elements used and power of each element	G1 [kW]	G2 [kW]	G3 [kW]	G4 [kW]	G5 [kW]
003	15	7	n°. 1 heating elements, power 3 x 2kW n°. 1 heating elements, power 3 x 3kW	3	2	3	2	3
				G6 [kW]	G7 [kW]	G8 [kW]	G9 [kW]	GS [kW]
				2	-	-	-	2
Value idx: 011	Total power [kW]	N. TRIAC	N. of heating elements used and power of each element	G1 [kW]	G2 [kW]	G3 [kW]	G4 [kW]	G5 [kW]
003	18	7	n°. 2 heating elements, power 3 x 3kW	3	3	3	3	3
				G6 [kW]	G7 [kW]	G8 [kW]	G9 [kW]	GS [kW]
				3	-	-	-	3

Value idx: 012	Description
val: 000	Boiler with PSA water pressure switch connected to poles 1 and 2 (J16 PCB)
val: 001	Boiler with pressure transducer connected to poles 1, 2 and 3 (J16 PCB)
val: 002	The board is configured for operation with idx: 012 val:001 , but the presence of errors F1 and F10 is ignored. This is necessary in the event that the pressure transducer fails and technical support does not have the spare part available. However, the boiler has a needle hydrometer that indicates the correct pressure of the system. When idx: 012 val:002 , the pressure shown on the display is 0.0 bar



SELECTION JUMPERS (move jumpers with the board not powered)

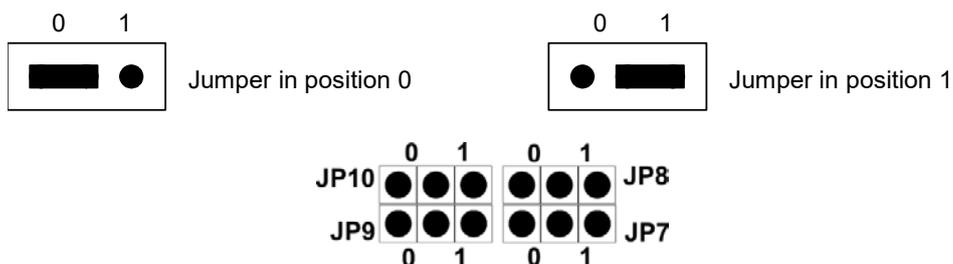


Jumper	0	1	Default
JP7	High temperature heating system (radiators)	Low temperature heating system (floor)	0
JP8	Combined application	Central heating only application	0
JP9	Sanitary water system with tank	Instantaneous sanitary water system	0
JP10	Boiler application	Scaldamassetto	0

PRIMARY EXCHANGER MANAGEMENT (BOILER BODY)

Depending on the power level required during the "heat demand", all or part of the controls from G1 to G6 relating to the primary exchanger are switched on. The activation of each command is controlled within an interval of 4 seconds. The higher the power required, the more the command will remain active in this interval. The power during a central heating or sanitary hot water request is calculated using a PID algorithm.

Below are two examples for powers equal to 40% and 60% of the total power (12 kW).

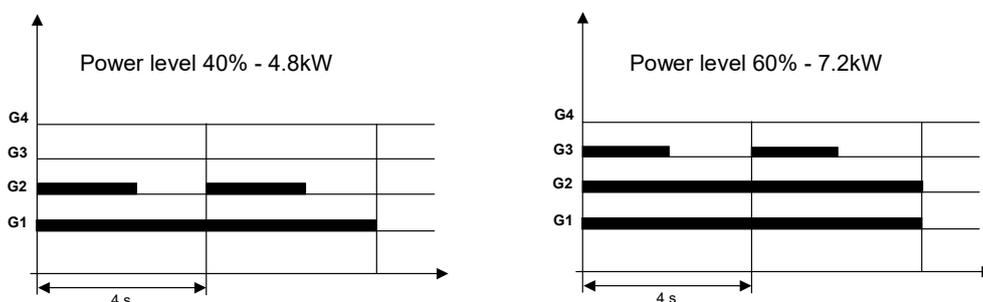

In case of simultaneous request of heating and sanitary hot water, the commands G1+G6 relating to the primary exchanger, and GS, relating to the sanitary water storage heater are operated as follows:

Boiler status	Primary G1÷G6	Tank GS
Central heating request only	G1 ÷ G6 = modulation	GS = OFF
Central heating + sanitary hot water request	G1 ÷ G5 = modulation G6 (or last available triac) = OFF	GS = ON
Central heating + micro sanitary hot water request	G1 ÷ G5 = modulation G6 (or last available triac) = OFF	GS = ON

Rotation of commands

The order in which the G1+G6 triac commands are switched on is rotated every hour, so that the use of all the heating elements is evenly distributed over time.



EXTERNAL PROBE MANAGEMENT (SE)

Installation and sliding temperature operation

The connection of the External Probe (SE) requires the use of the Original FIAMMA Kit code F.532, offered as part of the accessories for Elektra series electric boilers. The electric connection must be to the terminals (S and E) outside the main electric panel already arranged in the standard wiring of the boiler. The connection requires connection cables and wires with a minimum cross section of 1.5 mm, possibly avoiding the proximity of power lines or digital lines of inverters or anything else not compatible. After connection, the external probe must be enabled by entering a variation of parameter **idx: 001** from **0** to **1**.



The setpoint followed by the central heating delivery probe will be calculated using the following formula:


$$T_{ch} [^{\circ}\text{C}] = [(T_{room} [^{\circ}\text{C}] - T_{ext} [^{\circ}\text{C}]) * dc/10] + T_{room} [^{\circ}\text{C}]$$

T_{ch} : central heating setpoint calculated by the system

T_{room} : room temperature set by the user

T_{ext} : external temperature measured by the probe

dc: dispersion coefficient of the building, set using the parameter **idx: 002**.

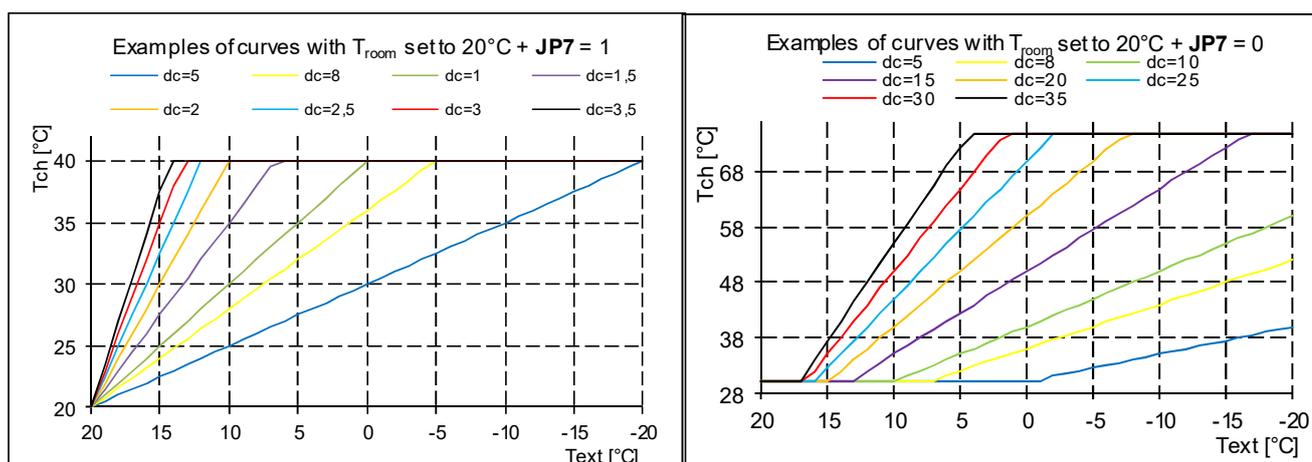

HEATING REQUEST

At the closure of the contact of the Room Thermostat (TA), or following the request by the weekly program, if the board is in winter mode, the electric deviation valve is brought in a heating position (CH), the system circulator is activated only if the temperature of the primary exchanger detected by the delivery probe is higher than the temperature set by means of the parameter **idx: 008**. If the temperature value detected by the delivery probe is less than the set heating setpoint, the triacs are switched on sequence based on the required power. This occurs only after a time settable through the parameter **idx: 005**, to allow for example the opening of any zone valves. The instantaneous power of the boiler and the relative control of the Triac G1, G2, G3, ..., Gn (n. max = 6) is equal to 50% of the maximum power if the delivery probe detects a temperature lower than the temperature value defined in the parameter **idx: 008**, otherwise it takes place by regulator PID. At the end of the request, the circulator remains powered for a time equal to the value set by the parameter **idx: 004** by implementing a post circulation on the heating system.



INTERNAL STORAGE TANK REQUEST (JP9 = 0 and P9 = 0)

Stand-by or with simultaneous heating request:

In this case, if the temperature detected by the boiler probe (SS) is lower than the boiler setpoint -1°C , the GS command related to the boiler's heating element is activated. When the temperature detected by the boiler probe exceeds the boiler setpoint, the GS command is deactivated. The activation of GS causes the shutdown of the heating element controlled by the last triac of the primary exchanger, which has a power equal to the power of the heating element in the boiler, so that the total maximum consumption of the system always remains constant.

Sanitary water flow meter request:

When a request is received from the DHW flow meter (FLM), the GS command for the storage tank heater (2/3 kW) is activated independently as long as the storage tank temperature remains below 70°C .

In "ECONOMY" mode, no primary exchanger heating element is activated.

In "COMFORT" mode, commands G1, G2, G3, ..., Gn (n. max = 6) relating to the primary exchanger are also controlled at the same time, bringing the delivery temperature to the storage tank setpoint value + a differential that can be set using the parameter **idx:006**. At the end of the request the circulator remains powered for a time equal to the value set using the parameter **idx:003**.

Primary exchanger preheating:

In standby conditions, the *COMFORT* function activates the primary exchanger, keeping it at a temperature equal to the domestic hot water (DHW) setpoint plus an adjustable temperature delta through parameter **idx:006**, in order to ensure a quick response for DHW. The circulator is not activated. The power used to manage this phase is 50% of the maximum power when the temperature detected by the flow sensor is below the DHW setpoint, 25% of the maximum power when the temperature detected by the flow sensor is between the DHW setpoint and the DHW setpoint + **idx:006**, and the primary exchanger is off when the temperature detected by the flow sensor exceeds the DHW setpoint + **idx:006**.

In all of the above cases, if an electric diverter valve is present (P10 = 1), it remains powered in the DHW position (230VAC). In *COMFORT* mode, at the end of a request from the DHW flow switch or flow meter, the diverter valve is activated for a short period (switching from DHW position to CH position and back to DHW) to prevent locking due to prolonged inactivity.

SANITARY WATER SYSTEM "ECONOMY" / "COMFORT" FUNCTION

In "ECONOMY" mode, no heating element of the primary exchanger is activated.

When the "COMFORT" function is active in standby conditions, the primary exchanger is kept at a certain temperature to ensure a quick response for domestic hot water (DHW).

The primary exchanger is maintained at a temperature equal to the DHW setpoint plus an adjustable differential through parameter **idx:006**.

ANTI-FREEZE FUNCTION

The antifreeze function is active in all operating modes: SUMMER, WINTER, and OFF (in standby, but with the main power switch on). If the flow sensor detects a temperature below 8°C , the circulator is activated, the zone valve is powered, and the electric diverter valve is switched to heating (CH) mode. If the temperature drops below 5°C , the



primary exchanger is turned on until the flow temperature reaches 20°C. At the end of the antifreeze request, the circulator remains powered for a time equal to the value set by parameter **idx:004**, performing post-circulation in the heating system.

ANTI-LEGIONELLA FUNCTION

This function is available only with an internal or external boiler equipped with a probe. The system continuously monitors the temperature of the boiler. If, within a certain time frame, the temperature does not reach 65°C, the system automatically activates the request to turn on the boiler's heating element to reduce bacterial growth. The intervention time of the legionella function is 3 hours from the first activation and then every 7 days.

CIRCULATOR LOCK PREVENTION

If the circulator has not performed any operating cycle within a 24-hour period, it is activated for 10 seconds to prevent blockage due to prolonged inactivity. At the end of the post-circulation phase, triggered by the domestic hot water request, the electric diverter valve is powered for 2 seconds to prevent blockage due to prolonged inactivity.

GRUNDFOS UPM4 "PWM" Version 2022 PUMP INSTRUCTIONS



The new UPM4 pump version 2022 is equipped with four default variable speeds via the PWM signal, which can be set by control panels.

Pump programming

Select the parameter **idx: 007** and choose one of the four flow rates available, setting the values from 1 to 4. Set 1 for minimum flow rate, or 4 for maximum flow rate, set 2 and/or 3 for intermediate flow rates.


View operating / Alarms

CONTROL MODE	
	No communication
	Communication: LIN/ PWM 10 flashes per second

ALARM STATUS	FAULT
	Blocked / electrical error

Alarms solution

1. Blocking error

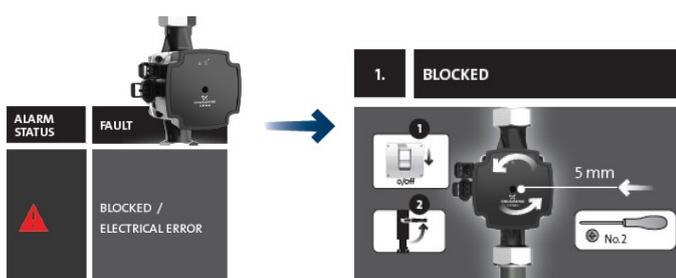


2. Electrical error





TACO 3GS "PWM" CIRCULATOR

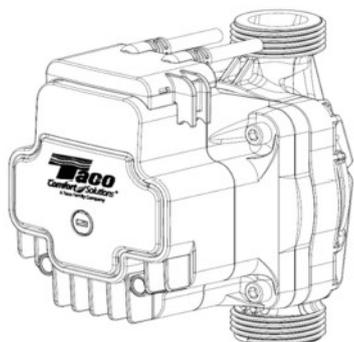

The 3GS series is a high-efficiency synchronous circulator with a permanent magnet motor designed for heating systems. The 3GS circulators offer a variety of solutions in terms of performance, connectivity, and communication protocols. The 3GS platform can communicate with the device through a Pulse Width Modulation (PWM) signal. The pump can be set by the external device, but it can also provide information to it. The circulators are speed-controlled by an internal frequency converter set by the external signal (PWM). Only the PWM signal is allowed to modify the pump speed. An external speed control should not be used.

FAULT CODES

Faults are indicated by an "ERROR F X" message, with X being the corresponding error code.

"ERROR" Code	Meaning
F 1	Functional system shutdown due to system pressure below 0.7 bar (idx: 012 val:1)
F 3	Central heating probe fault (SM)
F 4	Sanitary probe fault (SS)
F 7	Block by error of circulator feedback signal
F 8	Safety thermostat (TS) trip. To reset the system press ◀(SW3) [Res.]
F 9	EEPROM memory hardware failure
F 10	System pressure higher than 2.0 bar, with functional system shutdown if the pressure exceeds 2.8 bar (idx: 012 val:1)

UNLOCKING THE APPLIANCE (RESET)

Following a block, once the fault is restored, you can restore the system by pressing the appropriate button on the user interface display ◀ (SW3) [Res.].



DESCRIPTION ANOMALIES

Err F 1: Anomaly pressure system water system	
Anomaly	Following the values of the pressure transducer under the set threshold
Operating effects	The heat request is not served in all operating states
Effects on loads	<u>TRIAC primary exchanger</u> : OFF <u>Circulator</u> : DEACTIVATED after possible postcirculation <u>Deviator valve</u> : DHW <u>Zone valve</u> : DEACTIVATED
Actions to be carried out	System loading. Correct verification of operation and connection of the water pressure transducer.
Block	NO

Err F 3: Heating probe anomaly (SM)	
Anomaly	Primary short circuit exchanger probe or open circuit
Operating effects	The heat request is not served in all operating states
Effects on loads	<u>TRIAC primary exchanger</u> : OFF <u>Circulator</u> : DEACTIVATED after possible postcirculation <u>Deviator valve</u> : DHW <u>Zone valve</u> : DEACTIVATED
Actions to be carried out	Verification of operation and connection of the heating probe (SM)
Block	NO

Err F 4: DHW probe anomaly (SS)	
Anomaly	DHW probe in short circuit or open circuit
Operating effects	In the states where modulation takes as a reference, the DHW probe is not served heat
Effects on loads	Only in relation to the states in which the anomaly has effect. The state status takes control of the system.
Actions to be carried out	Verification of operation and connection of the DHW probe (SS)
Block	NO



Err F 7: Circulator feedback signal anomaly

Anomaly	The circulator's feedback signal takes on a non regular value
Operating effects	After 1 minute the PCB is sent to block
Effects on loads	After 1 minute: <u>TRIAC primary exchanger</u> : OFF <u>Circulator</u> : DEACTIVATED after possible postcirculation <u>Deviator valve</u> : DHW <u>Zone valve</u> : DEACTIVATED
Actions to be carried out	Verification of operation and circulator connection. Requirement correct water flow in the plant.
Block	YES

Err F 8: Block for Security Thermostat intervention (TS)

Anomaly	Above temperature in the primary exchanger or in the heating system
Operating effects	The heat request is not served in all operating states
Effects on loads	<u>TRIAC primary exchanger</u> : OFF <u>Circulator</u> : DEACTIVATED after possible postcirculation <u>Deviator valve</u> : DHW <u>Zone valve</u> : DEACTIVATED
Actions to be carried out	Requirement correct water flow in the plant. Verification of circulator operation. Verification of security thermostat operation (TS).
Block	YES

Err F 9: Hardware Anomaly Memory EEPROM


Anomaly	Breakage or malfunction of the storage in Eeprom that stores the parameters
Operating effects	The heat request is not served in all operating states
Effects on loads	<u>TRIAC primary exchanger</u> : OFF <u>Circulator</u> : DEACTIVATED after possible postcirculation <u>Deviator valve</u> : DHW <u>Zone valve</u> : DEACTIVATED
Actions to be carried out	Reset power supply and verification of the correctness of the stored parameters. PCB replacement.
Block	NO




Err F 10: High pressure anomaly water system	
Anomaly	The pressure transducer detects a high value in the water system
Operating effects	<u>Pressure <2,8 bar</u> : nobody, only anomaly is displayed. <u>Pressure > 2,8 bar</u> : in all states (DHW, heating, antifreeze, preheating) the heat request is not served
Effects on loads	<u>Pressure <2,8 bar</u> : nobody, only anomaly is displayed <u>Pressure > 2,8 bar</u> : <u>TRIAC primary exchanger</u> : OFF <u>Circulator</u> : DEACTIVATED after possible postcirculation <u>Deviator valve</u> : DHW <u>Zone valve</u> : DEACTIVATED
Actions to be carried out	Requirement correct water flow in the system. Correct verification of operation and connection of the water pressure transducer.
Block	YES



SPARE PARTS

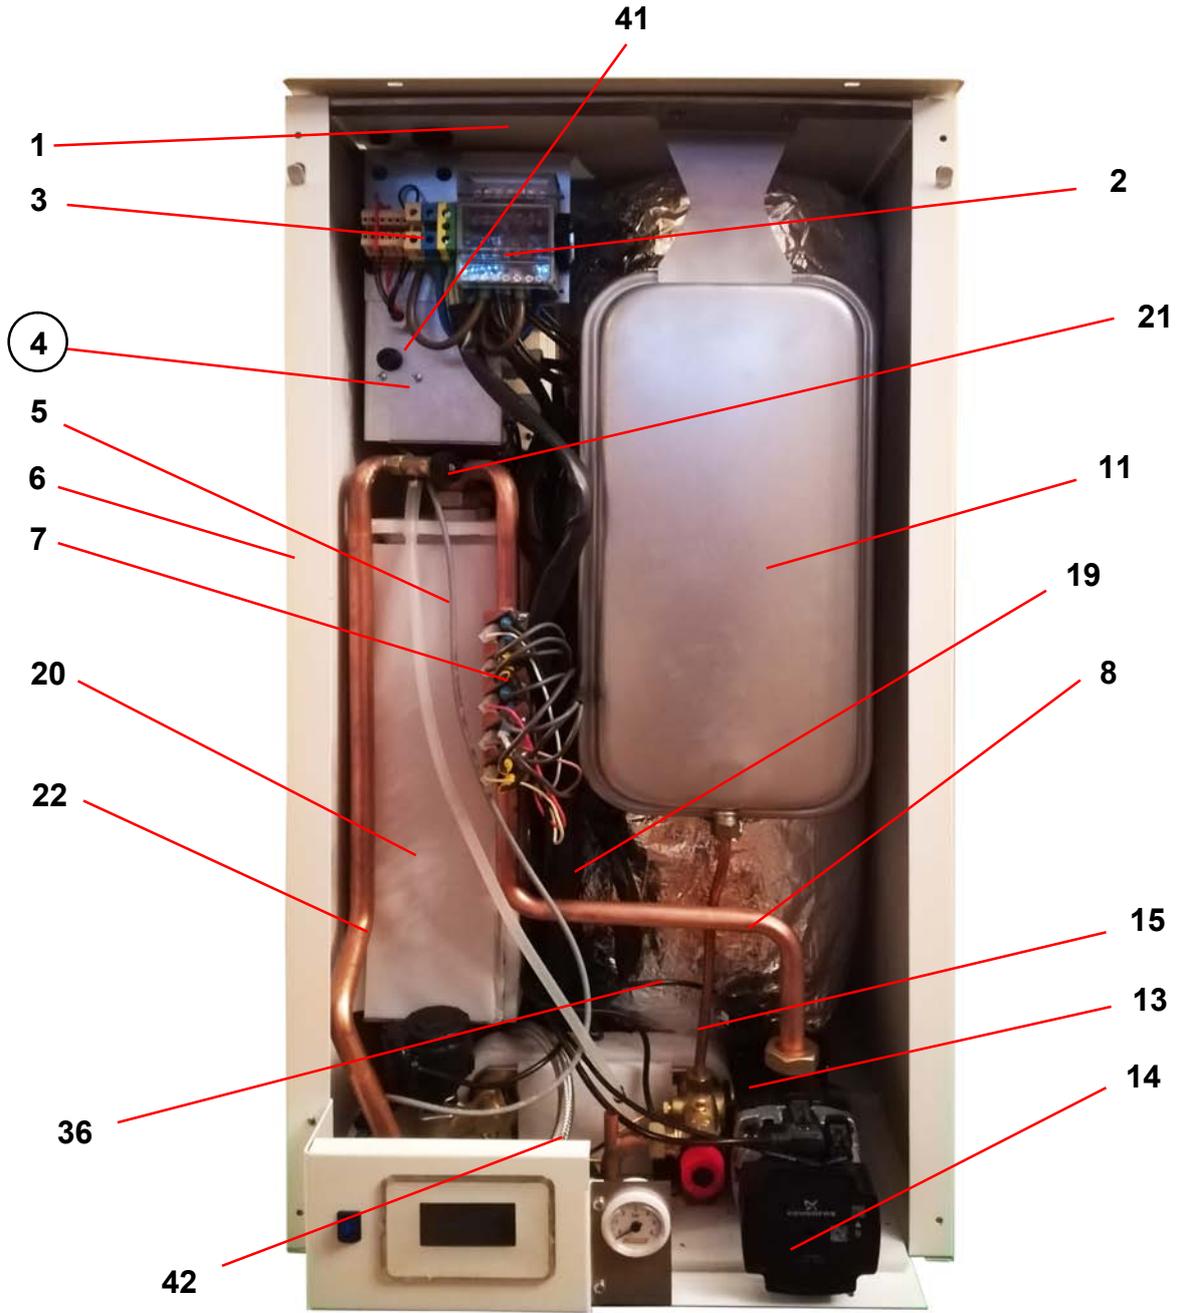


4 Detail view: Electric Box

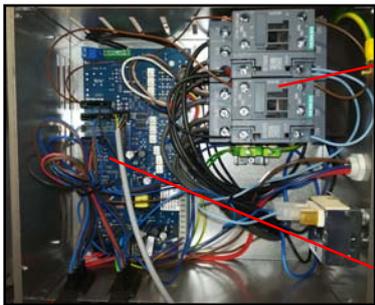

25, 26


Detail view: Hydraulic connections

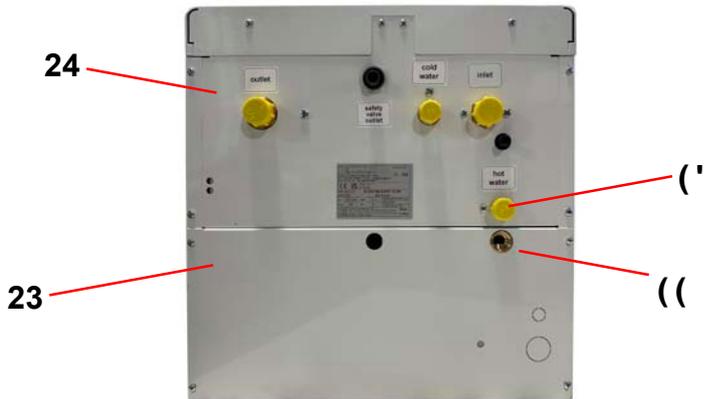


23, 24, ('), ((




Boiler front

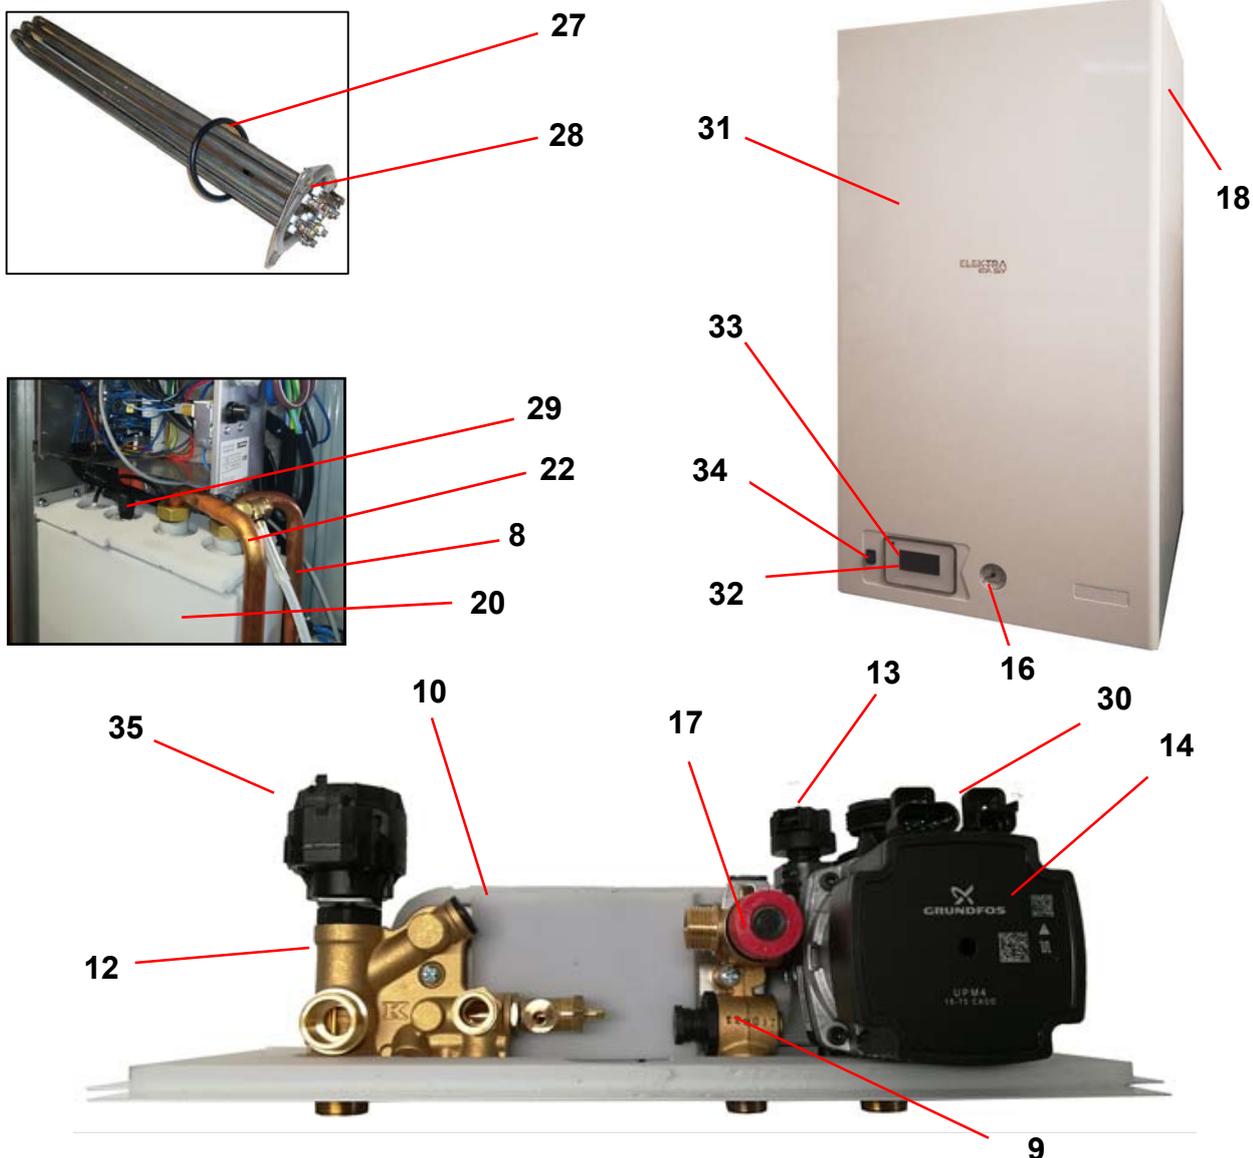

Detail view: Storage tank Flange/Probe/Heating Element/Anode assembly

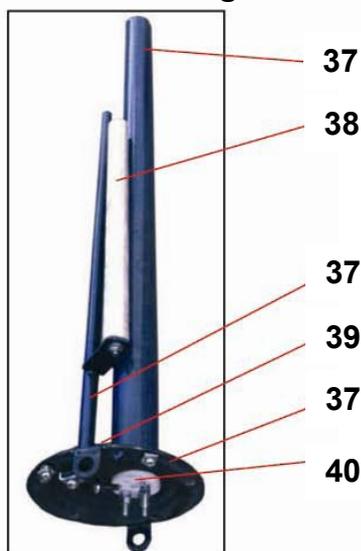

The storage tank flange assembly includes, in one single vitrified piece, the probe support sheath, the heating element support sheath and the support and inspection flange. The replacement of the magnesium anode requires the removal of the assembly. The replacement of the electric heating element does not require emptying the storage tank, as it is inside a vitrified steel hermetic sheath.

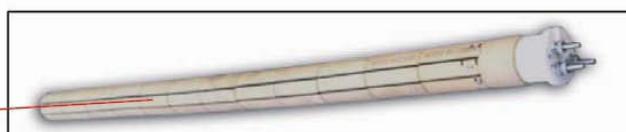




Spare parts legend

1	Elektra Easy BP upper sheet metal cover.....	Cod.P.7588
2	Elektra four-pole power terminal block.....	Cod.P.2070
3	Power supply line terminal 230-240 V (L) x 10 pcs.....	Cod.FGB.2073
	Neutral power supply terminal 230-240 V (N) x 10 pcs.....	Cod.FGB.2072
	Earth terminal (\pm) x 10 pcs.....	Cod.FGB.2074
4	General electric box (contactor/electronic board panel).....	
5	Touch display connection cable.....	Cod.P.8426
6	Left side shell.....	Cod.P.7590
7	Wiring terminal block (40 A - 600 V).....	Cod.P.8229
8	Wiring terminal block (40 A - 600 V).....	Cod.P.8229
9	Return assembly - cold water.....	Cod.FGB.257
10	Elektra Easy plate heat exchanger.....	Cod.FGB.7309
11	9 litre expansion tank.....	Cod.P.8459
12	Delivery assembly - diverter valve.....	Cod.FGB.258
13	Pressure transducer (max./min. pressure).....	Cod.FGB.8054
14	Variable head circulator (electronic pump).....	Cod.FGB.8415
15	Expansion vessel hose.....	Cod.P.8517
16	Hydrometer.....	Cod.FGB.221
17	Central heating safety valve 0.3 MPa (3 bar).....	Cod.P.1727
18	Right side shell.....	Cod.P.7589
19	Elektra Easy BP Wiring.....	Cod.P.8427
20	Elektra Easy BP boiler body.....	Cod.FGB.1951
21	Drain tap 1/4".....	Cod.FGB.225
22	Elektra Easy BP delivery pipe.....	Cod.P.8466
23	Elektra Easy BP bottom grid.....	Cod.P.7587
24	Hydraulic connection template.....	Cod.P.8456
25	Elektra Easy electronic board.....	Cod.FGB.8182
26	Elektra power contactor.....	Cod.P.2153
27	O-Ring seal x heating element.....	Cod.FGB.238
28	Heating element 3x2 kW.....	Cod.FGB.224
29	Contact safety thermostat 100°C.....	Cod.P.1195
30	Automatic vent valve (jolly).....	Cod.FGB.263
31	Elektra Easy BP front cover.....	Cod.P.8457



32	Touch Display.....	Cod.FGB.8286
33	Elektra Easy BP Instrument Panel.....	Cod.P.8266
34	Illuminated main switch.....	Cod.FGB.248
35	Diverter valve motor (actuator).....	Cod.FGB.223
36	Storage tank 37 litres.....	Cod.FGB.235
37	Flange/Probe sheath/Heating Element sheath assembly.....	Cod.P.2163
38	Storage tank magnesium anode.....	Cod.P.2165
39	Storage tank flange gasket.....	Cod.P.2166
40	2kW Ceramic heating element for sanitary hot water storage tank.....	Cod.P.2167
41	Storage tank safety thermostat.....	Cod.FGB.236
42	Cold water storage tank inlet pipe.....	Cod.P.8518
43	Hot water group.....	Cod.P.8441
44	Heating safety valve 0,65 MPa (6,5 bar).....	Cod.P.8442

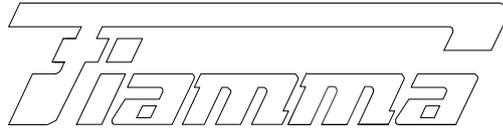

GAS & ELECTRIC BOILER ®

**DICHIARAZIONE DI
CONFORMITA'**



**DECLARATION OF
CONFORMITY**

In accordo con - *According to:*

- 2014/35/EU** Direttiva Bassa Tensione (BT) – *Low Voltage Directive (LVD).*
- 2004/30/EU** Direttiva Compatibilità Elettromagnetica - *Electromagnetic compatibility Directive (EMC).*
- 2011/65/EU** Direttiva restrizione uso di determinate sostanze pericolose in apparecchiature elettriche ed elettroniche. *Directive on the restriction of use of certain hazardous substances (RoHS).*
- 1935/2004** Regolamento riguardante i materiali e gli oggetti destinati a venire a contatto con i prodotti alimentari. *Regulation on materials and articles intended to come into contact with food.*
- 813/2013/EU** Regolamento per la progettazione ecocompatibile degli apparecchi per il riscaldamento d'ambiente e degli apparecchi di riscaldamento misti. - *Ecodesign requirements for space heaters and combination heaters.*
- 811/2013/EU** Regolamento riguardante l'etichettatura indicante il consumo d'energia degli apparecchi per il riscaldamento d'ambiente, degli apparecchi di riscaldamento misti. *Regulation regard to the energy labelling of space heaters, combination heaters, packages of space heater, temperature control and solar device and packages of combination heater, temperature control and solar device.*

N° di identificazione - <i>Identification No. :</i>	Vedi numero di matricola / <i>See the serial number</i>
Costruttore - <i>Manufacturer :</i>	FIAMMA GIRO s.r.l.
Indirizzo- <i>Address :</i>	via L. Landucci n° .2/B - 51100 PISTOIA - ITALY
Telefono - <i>Telephone :</i>	(+39).0573.532812
Telefax – <i>Telefax :</i>	(+39).0573.532890 - info@fiammagiro.it
Tipo di apparecchio - <i>Type of equipment :</i>	Caldaia murale elettrica / <i>Electric wall boiler</i>
Marchio commerciale - <i>Trademark :</i>	 (dicitura FIAMMA / FIAMMA marked)
Tipo / Modello – <i>Type / Model :</i>	Vedi Modello su targhetta dati / <i>See the model in data code</i> ELEKTRA.. 6 ÷ 24 ... ELEKTRA.. 6 ÷ 24...

Le norme armonizzate o le specifiche tecniche (designazioni) che sono state applicate in accordo con le regole della buona arte in materia di sicurezza in vigore nella Unione Europea sono :
The following harmonised standards or technical specifications (designations) which comply with good engineering practice in safety matters in force within the European Union have been applied :

Norme o altri documenti normativi <i>Standards or other normative documents</i>	Rapporto di collaudo - Schede tecniche <i>Test report-Technical file</i>
IEC 60335-1:2010+A1:2013+A2:2016 – IEC 60335-2-21:2012+A1:2018	Nr.EP20-0059463-01 rev.1
EN 60335-2-21:2003+A1:2005+A2:2008	
EN 60335-1:2012+A11:2014+A13:2017+A1:2019+A2:2019+A14:2019	
Le caldaie della serie ELEKTRA.. sono certificate CB con documento n°.IT-22669/A1. The boilers of the ELEKTRA.. series are CB certified with document number IT-22669/A1.	
EN 61000-3-11:2011; EN 61000-3-12:2011; EN 61000-3-11:2001; EN 61000-3-11:2000; EN 55014-1; EN 55014-2	
Le caldaie della serie ELEKTRA sono state verificate con Test-Report n°.TRA-030968-36-00A The boilers of the ELEKTRA series have been verified with Test-Report n° .TRA-030968-36-00A.	


In qualità di costruttore e/o rappresentante autorizzato della società all'interno della Unione Europea, si dichiara sotto la propria responsabilità che gli apparecchi sono conformi alle esigenze essenziali previste dalle Direttive e Regolamenti su menzionate/i.
 As the manufacturer's authorized representative established within European Union, we declare under our sole responsibility that the equipment follows the provisions of the Directives and Regulations stated above.

Pistoia, 15/07/2022

Giro Luca
 presidente consiglio di amministrazione
 Board Chairman of administration

SEDE: 51100 PISTOIA - ITALIA - Via L. Landucci, 2 z.i. - Tel. (+39).0573.532812 - Telefax: (+39).0573.532890 - E-mail: fiammaPT@fiammagiro.it
 Cap. soc. € 40.000,00 Int. versato. - P.I.V.A. 01432870473 - R.E.A. 149197 - Albo Art. PT49948

FILIALE: 37049 VILLA BARTOLOMEA (VR) - ITALIA - Via P. Bettini, 19 Z. I. Tel. (+39).0442.659028 - Telefax (+39).0442.659045
 E-mail : info@fiammagiro.it - fiammaVR@fiammagiro.it - ufficiotecnico@fiammagiro.it - <http://www.fiammagiro.com>

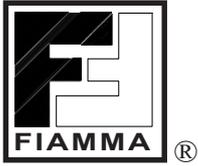

FIAMMA
GAS & ELECTRIC BOILER



DECLARATION OF CONFORMITY



DICHIARAZIONE DI CONFORMITA'

In accordo con - *According to:*

Electrical Equipment (Safety) Regulations 2016. - *Direttiva Bassa Tensione (Sicurezza) 2016.*

Electromagnetic Compatibility Regulations 2016. - *Direttiva Compatibilità Elettromagnetica 2016.*

2015/863/EU Directive on the restriction of use of certain hazardous substances (RoHS).
Direttiva restrizione uso di determinate sostanze pericolose in apparecchiature elettriche ed elettroniche.

1935/2004 Regulation on materials and articles intended to come into contact with food.
Regolamento riguardante i materiali e gli oggetti destinati a venire a contatto con i prodotti alimentari.

813/2013/EU Ecodesign requirements for space heaters and combination heaters. - *Regolamento per la progettazione ecocompatibile degli apparecchi per il riscaldamento d'ambiente e degli apparecchi di riscaldamento misti.*

811/2013/EU Regulation regard to the energy labelling of space heaters, combination heaters, packages of space heater, temperature control and solar device and packages of combination heater, temperature control and solar device.
Regolamento riguardante l'etichettatura indicante il consumo d'energia degli apparecchi per il riscaldamento d'ambiente, degli apparecchi di riscaldamento misti.

Identification No. - <i>N° di identificazione :</i>	See the serial number / Vedi numero di matricola.
Manufacturer - <i>Costruttore :</i>	FIAMMA GIRO s.r.l.
Address - <i>Indirizzo :</i>	via L. Landucci n° .2/B - 51100 PISTOIA - ITALY
Telephone - <i>Telefono :</i>	(+39).0573.532812
Telefax - <i>Telefax :</i>	(+39).0573.532890 - info@fiammagiro.it
Type of equipment - <i>Tipo di apparecchio :</i>	Electric wall boiler / <i>Caldaia murale elettrica</i>
Trademark - <i>Marchio commerciale :</i>	 (marked FIAMMA / FIAMMA dicitura)
Type / Model - <i>Tipo / Modello :</i>	See the model in data code / <i>Vedi Modello su targhetta dati</i> ELEKTRA.. 6 ÷ 24 ... ELEKTRA.. 6 ÷ 24...

The following standards or technical specifications (designations) which comply with good engineering practice in safety matters in force have been applied :

Le norme o le specifiche tecniche (designazioni) che sono state applicate in accordo con le regole della buona arte in materia di sicurezza sono :

Standards or other normative document - <i>Norme o altri documenti normativi</i>	Test report-Technical file
IEC 60335-1:2010+A1:2013+A2:2016 – IEC 60335-2-21:2012+A1:2018	Rapporto di collaudo - Schede tecniche
EN 60335-2-21:2003+A1:2005+A2:2008	Nr. EP20-0059463-01 rev.1
EN 60335-1:2012+A11:2014+A13:2017+A1:2019+A2:2019+A14:2019	
The boilers of the ELEKTRA.. series are CB certified with document number IT-22669/A1.	
Le caldaie della serie ELEKTRA.. sono certificate CB con documento °.IT-22669/A1.	
EN 61000-3-11:2011; EN 61000-3-12:2011; EN 61000-3-11:2001; EN 61000-3-11:2000; EN 55014-1; EN 55014-2	
The boilers of the ELEKTRA series have been verified with Test-Report n° .TRA-030968-36-00A.	
Le caldaie della serie ELEKTRA sono state verificate con Test-Report n° .TRA-030968-36-00A	

As the manufacturer's authorized, we declare under our sole responsibility that the equipment follows the provisions of the Regulations stated above.

In qualità di costruttore e/o rappresentante autorizzato della società, si dichiara sotto la propria responsabilità che gli apparecchi sono conformi alle esigenze essenziali previste da i Regolamenti su menzionati.

Pistoia, 15/07/2022

Giro Luca
presidente consiglio di amministrazione
Board Chairman of administration



SEDE: 51100 PISTOIA - ITALIA - Via L. Landucci, 2/B z.i. - Tel. (+39).0573.532812 - Telefax: (+39).0573.532890 - E-mail: fiammaPT@fiammagiro.it
Cap. soc. € 40.000,00 Int. versato. - P.I.V.A. 01432870473 - R.E.A. 149197 - Albo Art. PT49948
FILIALE: 37049 VILLA BARTOLOMEA (VR) - ITALIA - Via P. Bettini, 19 Z. I. Tel. (+39).0442.659028 - Telefax (+39).0442.659045
E-mail : info@fiammagiro.it - fiammaVR@fiammagiro.it - ufficiotecnico@fiammagiro.it



FIAMMA GIRO s.r.l. Company group



Sede legale e stabilimento: via L. Landucci n° 2/B - 51100 PISTOIA - ITALY
Tel. (+39).0573.532812 Fax. (+39).0573.532890 - E.mail: fiammaPT@fiammagiro.it
Filiale e stabilimento: via P. Bettini n° 19 - 37049 VILLA BARTOLOMEA (VR) - ITALY
Tel. (+39).0442.659028 Fax. (+39).0442.659045 - E-mail: fiammaVR@fiammagiro.it

www.fiammagiro.com